




PMT KEYBOARD CRADLE INSTALLATION GUIDE

Product Mounting Disclaimer

Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.




DESCRIPTION OF PARTS

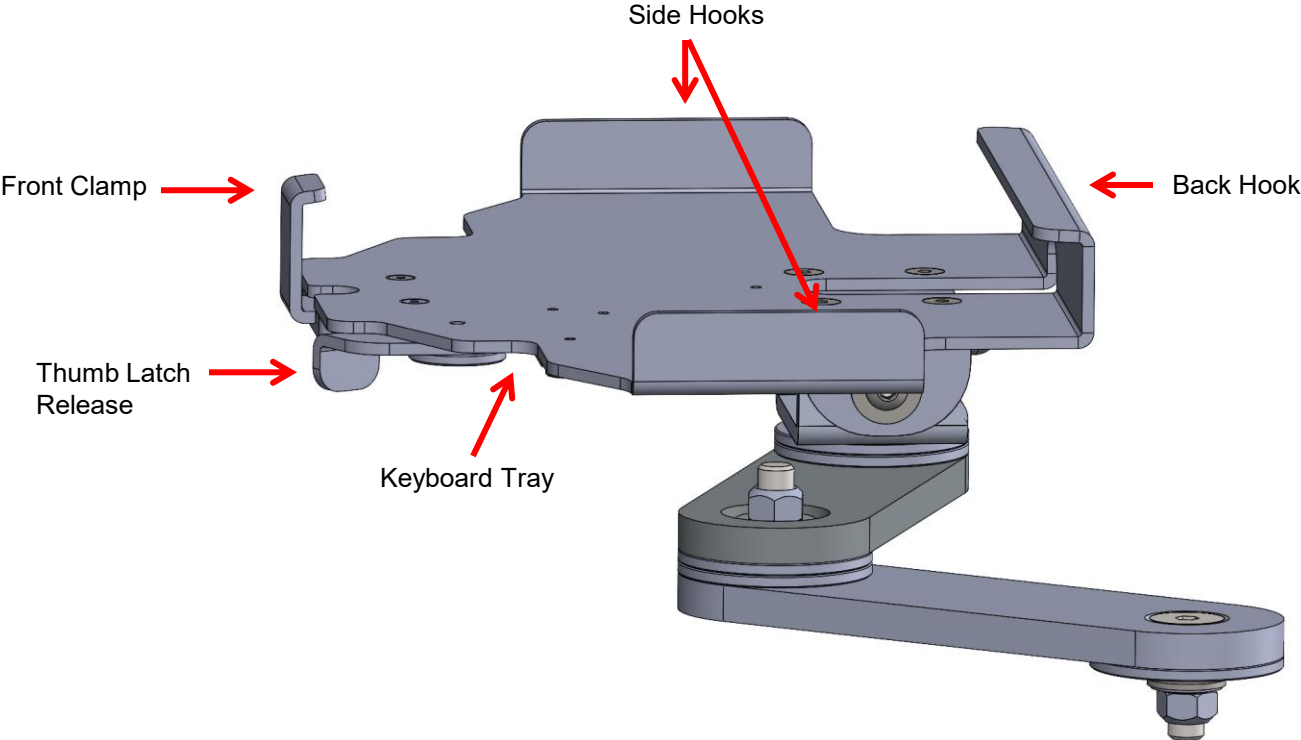

INSTALLATION INSTRUCTIONS


Step 1

Attached keyboard cradle to a preferred mounting surface (Clamshell, Keyboard Arm, Keyboard Plate, etc.) and secure with four (4) supplied flat head screws.

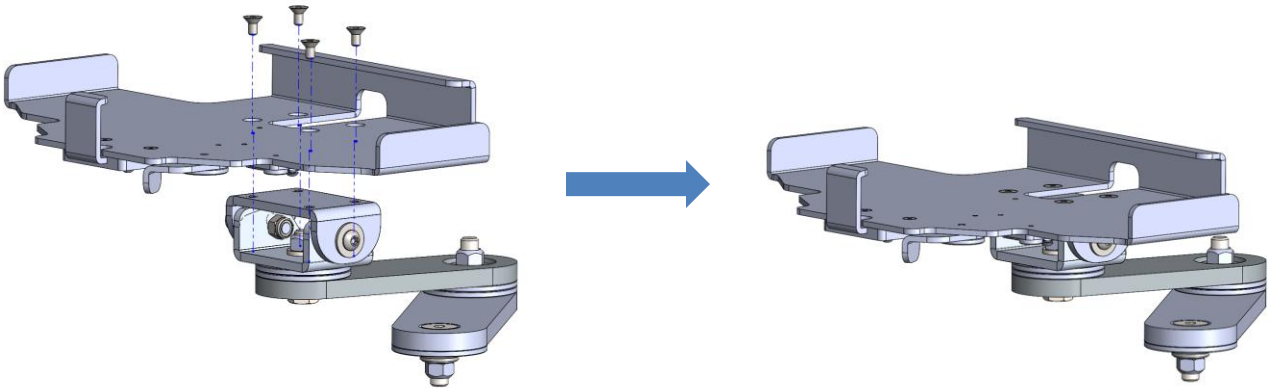

Step 2

Align the keyboard to the back and side hooks, then lower it into position.

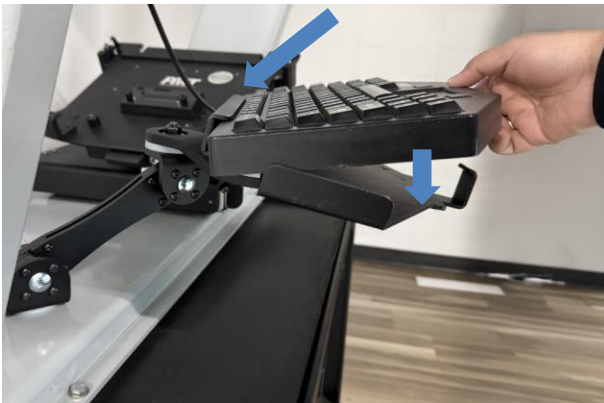

INSTALLATION INSTRUCTIONS

Step 3

Push the front clamp towards the keyboard overcoming the resistance until it snaps over the keyboard.



Step 4

To undock the keyboard, push the thumb latch to the left until the clamp releases.



End of Installation.