



# SCREEN LOCK MODULE FOR PANASONIC TOUGHBOOK 20 LAPTOP COMPUTERS


## USER GUIDE

Description	Part Number
Toughbook 20 Screen Lock Arm	AS7.P020.001



# GENERAL INSTRUCTIONS

The Screen Lock provides theft deterrence of the tablet from the laptop while it is in the dock. The Screen Lock module is included in certain dock sku's and is also available as a separate add-on module (PMT part# AS7.P020.001).

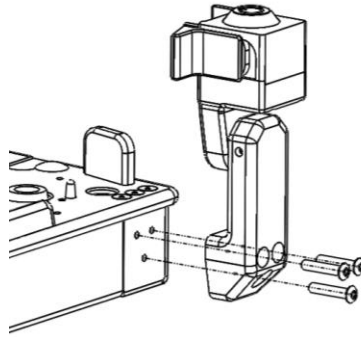


Once the Screen Lock module is attached to the dock:

While docking, make sure that the plastic tab is moved all the right so that it is not obstructing while docking the laptop into the dock.

Once the laptop is docked securely, Rotate key 90 degrees clockwise and remove the key to lock the Screen Lock. This would secure the tablet to the keyboard and the dock.

Once the Screen Lock is locked, push the plastic tab to the left. This would minimise the screen rattle during extreme vibration.

Before you undock the laptop, make sure the screen lock is unlocked.

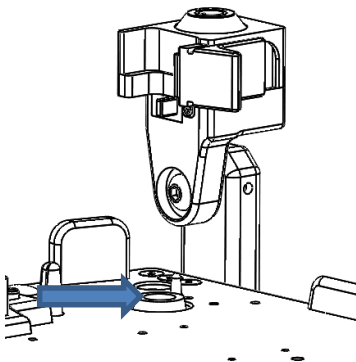

**NOTE:** The Screen Lock arm might get loose after repetitive use (10,000 cycles). If the arm gets loose, tighten the 1/4-20 screw, as shown to the left, to desired torque using an allen key

The screen lock/support is a patented design. US Patent Number: 10,067,533