



TrimLine Vehicle Dock For GammaTech DURABOOK R11 Tablet Computers

User Guide

Description	Part Number
R11 Standard DPT Docking Station	AS7.G011.102
R11 Extended DPT Docking Station	AS7.G011.202


Note: Extended docks accommodate extended batteries and hand straps

Note: Pictures in this guide show the standard dock, however the steps and procedures described pertain to both standard and extended docks

www.precisionmounts.com


Description of Parts and Layout

Front View

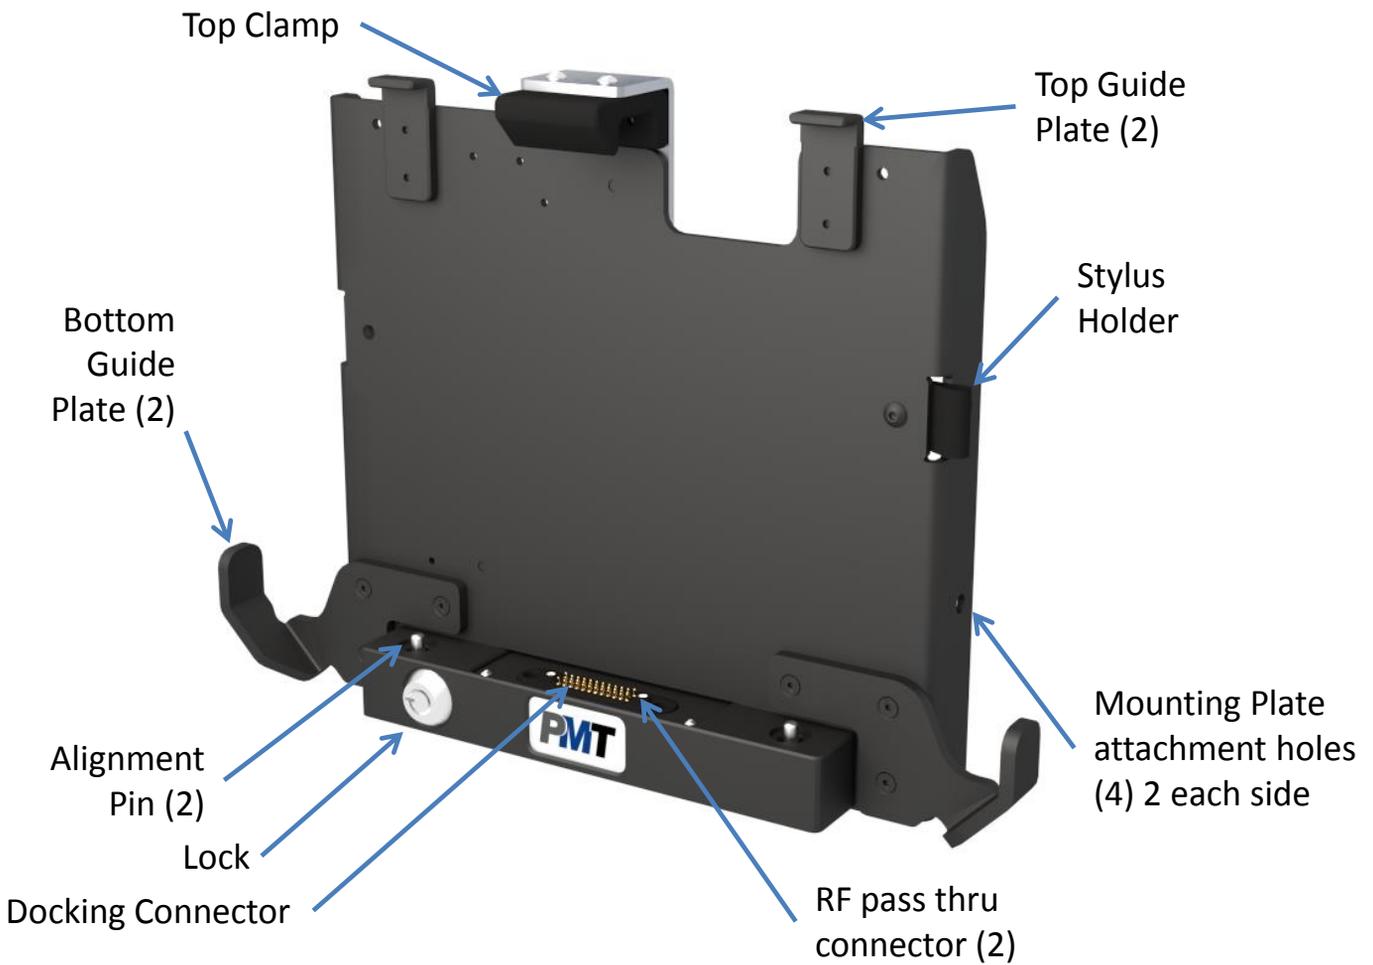

Description of Parts Continued

Rear View

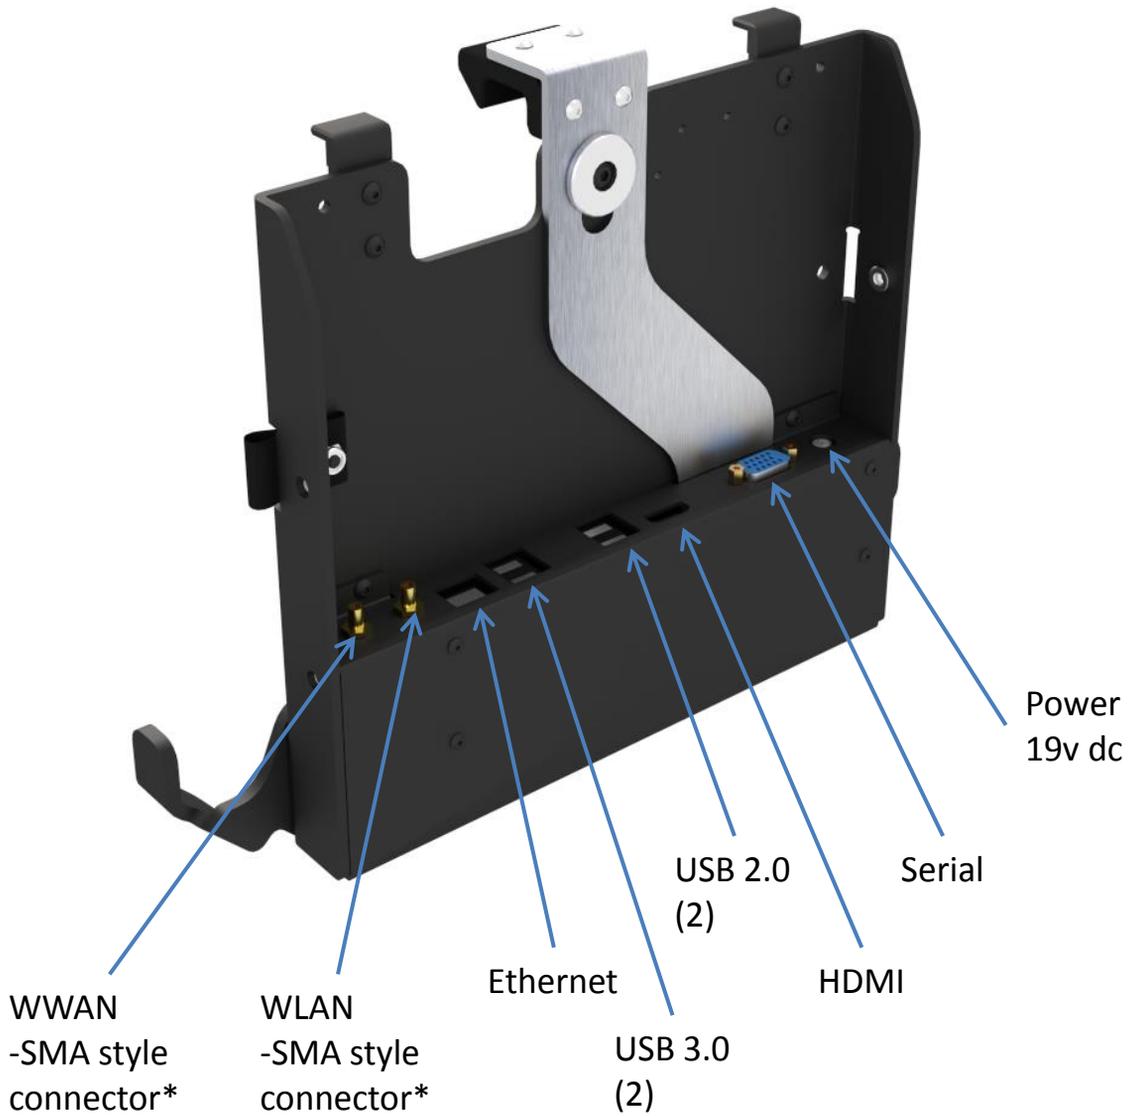

*TNC adapters available

Inserting the Tablet



Step 1:

Ensure the dock is unlocked

- Insert key and rotate to unlocked position
- Top clamp will move freely



Step 2:

Insert the computer bottom first and carefully align the tablet onto the locating pins using the bottom guide plate for positioning



Step 3:

Press the tablet back into the dock which will force the top clamp up and spring into place when tablet is fully seated

Step 4:

Lock

- Insert key, rotate to locked position, remove key

Removing the Tablet



Step 1:

Unlock

- Insert key and rotate to unlocked position



Step 2:

Use your thumb(s) to move the top clamp up and away from the tablet



Step 3:


Simultaneously hold the top clamp up while tilting the top of tablet away from the dock. Once clear, release the top clamp and remove the tablet from the dock



Step 4:

At this point you can either rotate the key 90 degrees clockwise and remove it, or leave it in place so the tablet can be re-inserted again quickly

Wiring/Cable Management

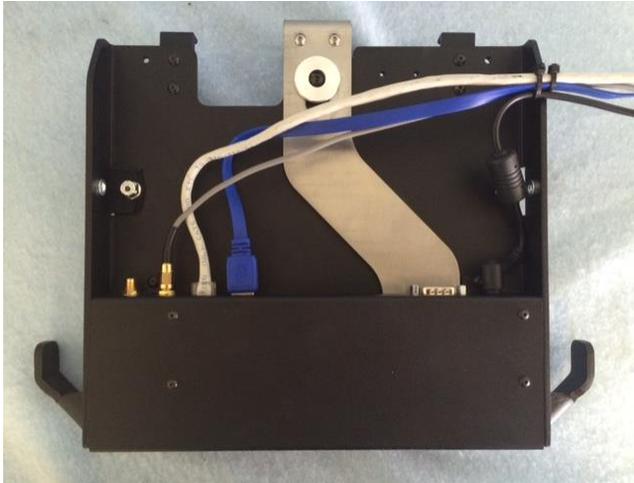


Connect all cables securely to dock connections, and use tie straps to secure cables to the built-in slots on the mounting/interface plate.

Wiring Tip:

PMT does not recommend relying on a cigarette socket adaptor for powering vehicle docks. We recommend hard wiring using a good clean ground direct from the vehicle battery (-) post, and (+) supply from a fused 12v location also directly from the vehicle battery. All Peripherals connecting to the docking station should get power and ground from the same location as the dock.


Visit www.precisionmounts.com/installation-instructions.html for a copy of our general wiring and troubleshooting guide

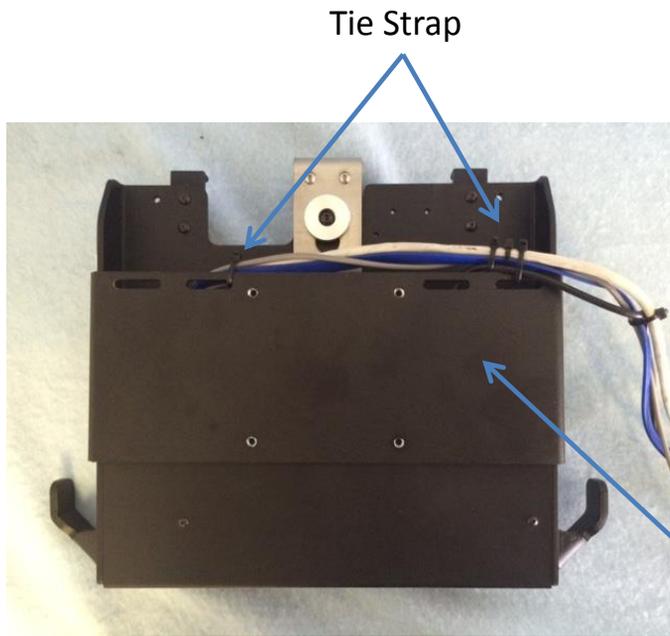

Tie Strap

PMT VESA 75mm x 75mm
mounting/interface plate

Mounting

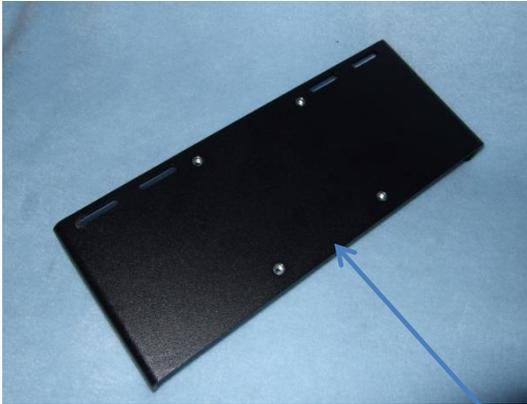

Once you have attached all cables needed to the vehicle dock, attach the mounting/interface plate to the dock using the 4 supplied 10-24 UNC screws as shown



Description	Part Number
PMT VESA 75mm x 75mm mounting/interface plate	AS7.P001.001



The standard mounting/interface plate that comes with the PMT G1 TrimLine vehicle dock features an industry standard VESA 75mm x 75mm bolt pattern. This allows easy mounting to many pre-existing mounts as well as dedicated mounts from PMT. The screws needed for this are M4 x 12mm.



For more info visit: www.precisionmounts.com

Or call us at 1-888-869-7652
info@precisionmounts.com