



## UNIVERSAL ELECTRONICS TRAY USER GUIDE


Description	Part Number
UNIVERSAL ELECTRONICS TRAY	AS4.C253.100


### Product Mounting Disclaimer

Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.



# DESCRIPTION OF PARTS

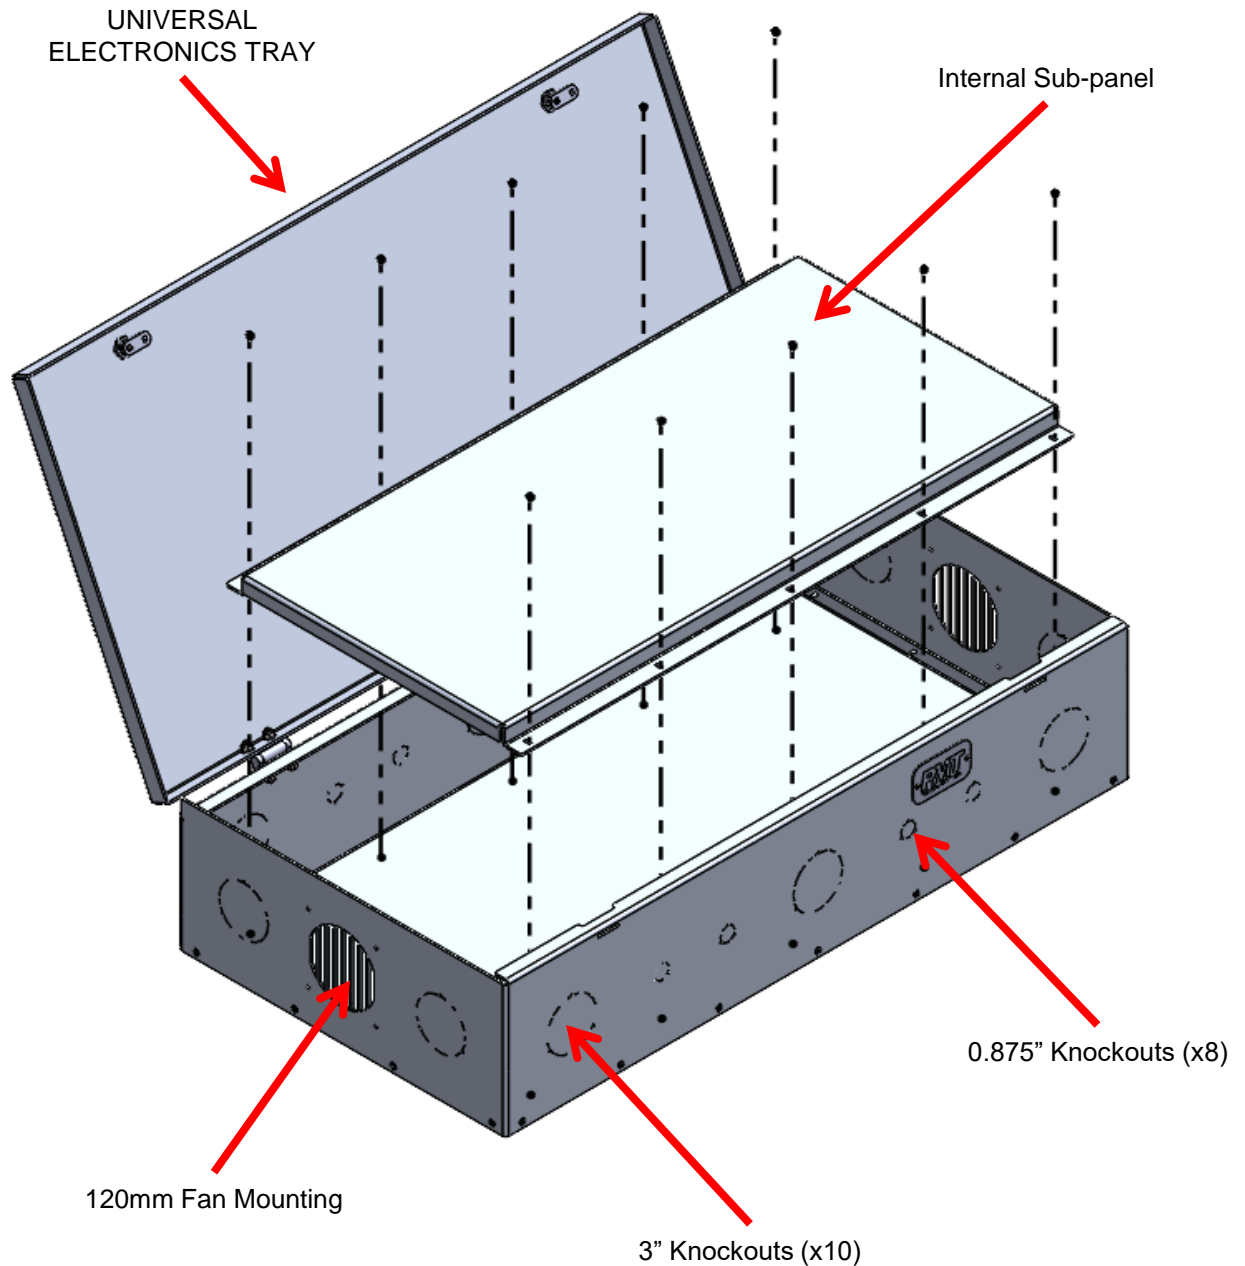

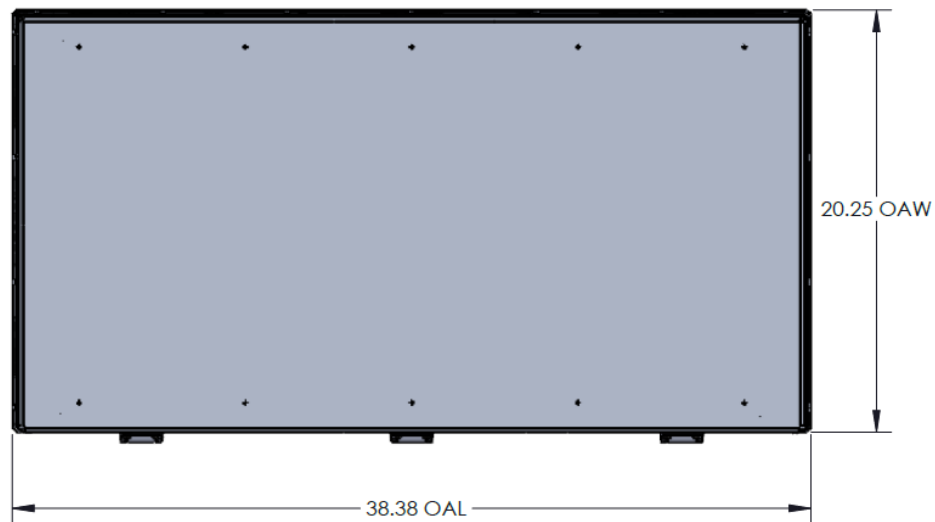[illegible]

# INSTALLATION INSTRUCTIONS

## Tools and hardware required:

- Socket set
- Allen key set
- Drill and drill bits
- Hammer
- Appropriate mounting hardware (customer supplied)


## Installation parts:

Quantity	Description
1	UNIVERSAL ELECTRONICS TRAY

# INSTALLATION INSTRUCTIONS

## Step 1

Remove the interior subpanel

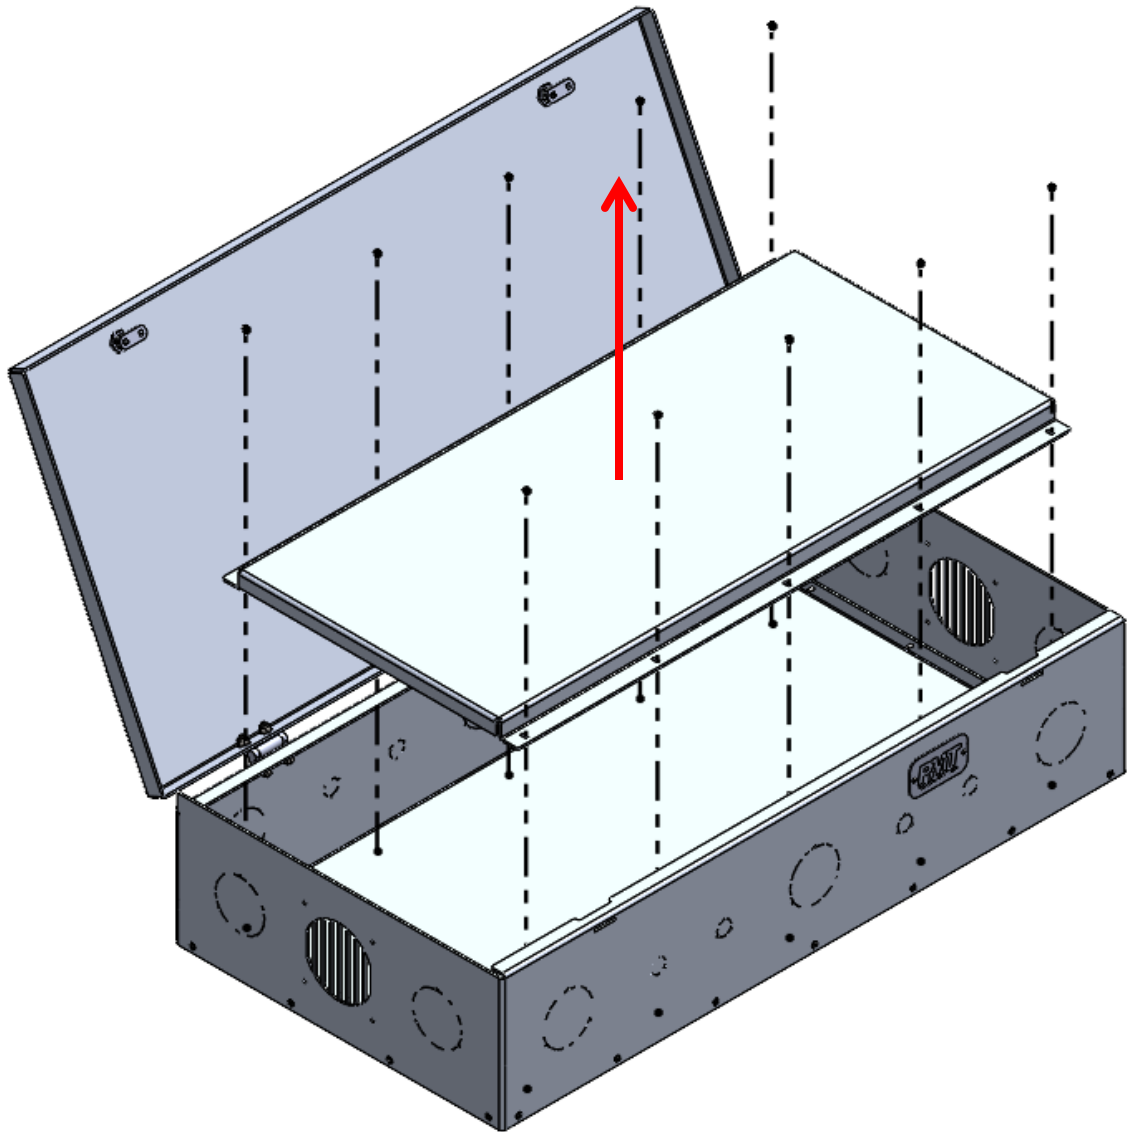

# INSTALLATION INSTRUCTIONS

## Step 2

Mark and drill holes to mount box in desired location





# INSTALLATION INSTRUCTIONS

## Step 3

If desired, remove knockouts by hitting the center of the breakaway section with a hammer



# INSTALLATION INSTRUCTIONS

## Step 4

Install the tray in desired location and secure with fasteners (customer supplied)






# INSTALLATION INSTRUCTIONS

## Step 5

Install electronics on the interior sub panel.

## Step 6

Re-install the sub panel in the storage tray.

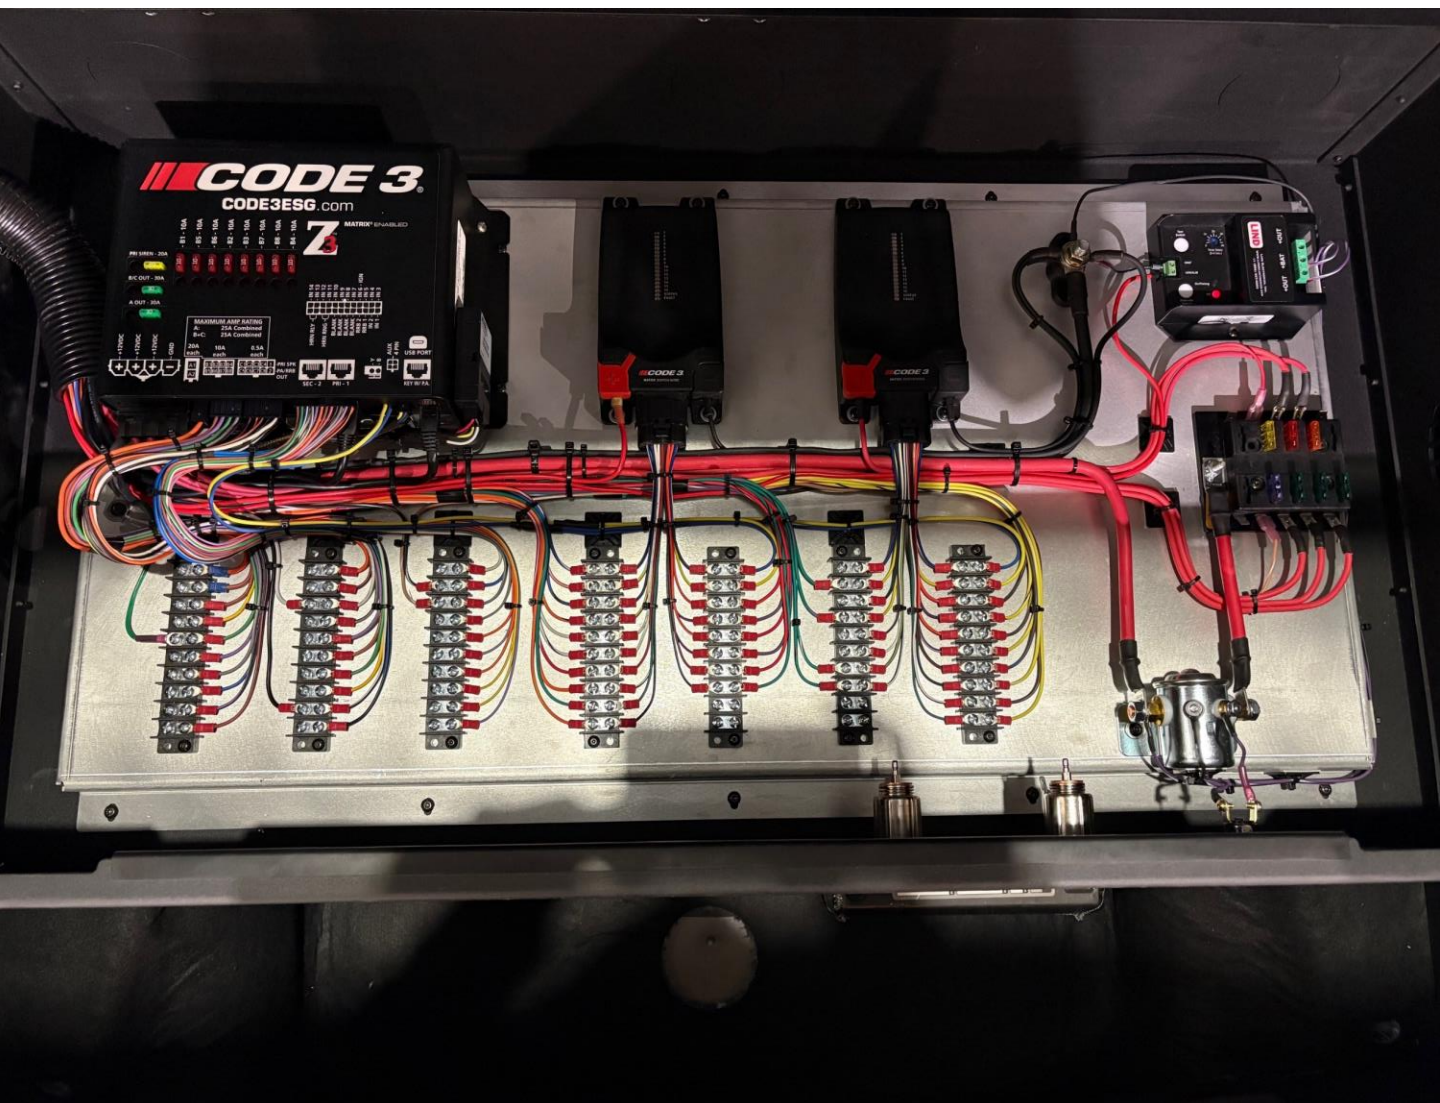

# INSTALLATION INSTRUCTIONS



The installation is now complete.