



SCANNER POCKET MOUNT USER GUIDE

Description	Part Number
SCANNER POCKET WITH TABLET MOUNT	AS5.B100.001
SCANNER POCKET WITH SANDWICH MOUNT	AS5.B100.002

Product Mounting Disclaimer

Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.



INSTALLATION INSTRUCTIONS



FOR AS5.B100.001

Tools and hardware required:

- Socket set

Step 1

- Attach the assembly via the VESA or AMPS hole pattern on the tablet bracket. It is important to note that the bracket can be mounted on either side of the scanner pocket by using the supplied square cutouts.
- Adjust the width of the scanner pocket to your needs via the top lock nuts.

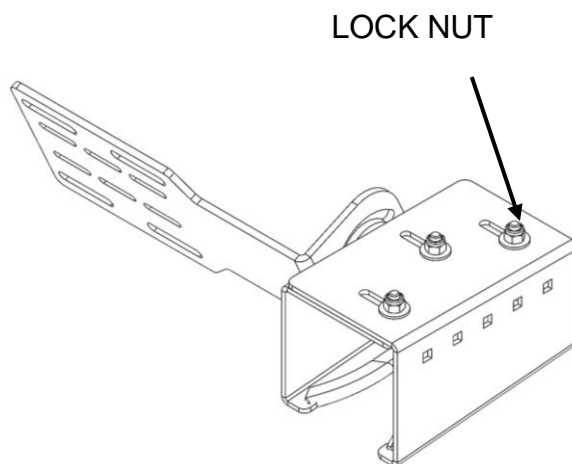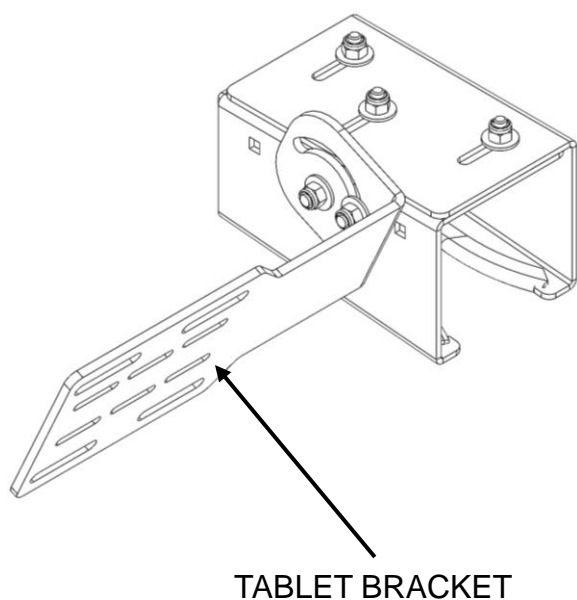

INSTALLATION INSTRUCTIONS

FOR AS5.B100.002

Tools and hardware required:

- Socket set

Step 1

- Attach the assembly via the sandwich plates. It is important to note that the bracket can be mounted on either side of the scanner pocket by using the supplied square cutouts.
- Adjust the width of the scanner pocket to your needs via the top lock nuts.

