



## UNIVERSAL PEDESTAL BASE INSTALLATION AND USER GUIDE

Description	Part Number
UNIVERSAL PEDESTAL BASE	AS4.P501.026

### Product Mounting Disclaimer


Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.



# DESCRIPTION OF PARTS

## AS4.P501.026

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	40.P500.049	UNIVERSAL BASE - FIXED RIGHT SIDE	1
2	40.P500.050	UNIVERSAL BASE - FIXED LEFT SIDE	1
3	40.P500.051	UNIVERSAL BASE - CENTER	1
4	40.P500.052	UNIVERSAL BASE - LEG	1
5	CARHD010	3/8-16X1 CAR HD BOLT ZINC	8
6	HEXHD023	3/8-16X1 HEX HD BOLT ZINC	2
7	WASHR003	3/8 STEEL DSC SPR WASHER	10
8	NYLOK020	.38-16 NUT NYLOK ZINC	8

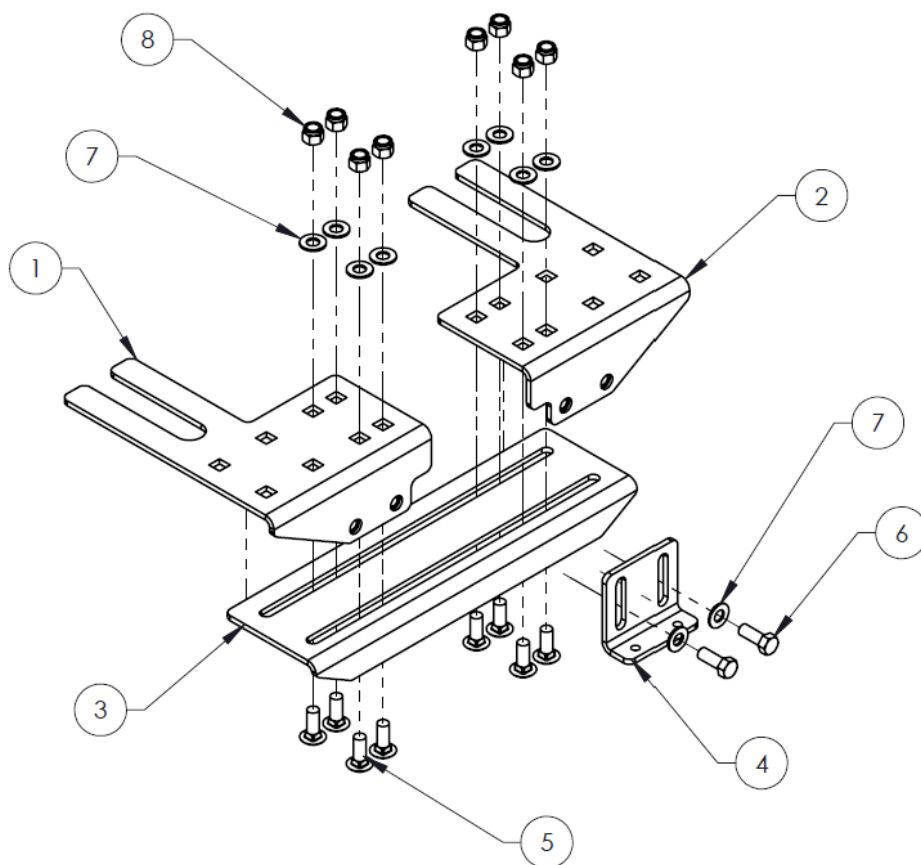

# VEHICLE COMPATABILITY GUIDE

## Seat Bolt Orientation:


PMT's Universal Pedestal Base can be installed in front of the seat (A) and to the side of the seat (B) if the vehicle allows.



## OEM Centre Console Clearance:

Distance needed to clear the Universal Base is 1.50" for the OEM center console to the center of the seat bolt.

Base adjustment is from 11.50" to 19.38".

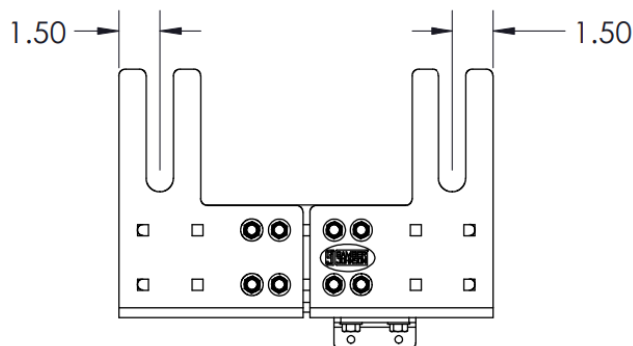

# INSTALLATION INSTRUCTIONS

## Step 1

Pre-assembly - Measure center to center distance of seat bolts and adjust base to the same distance.



## Step 2

Remove OEM seat bolts, then slide Universal Base in between seat and seat rail frame. Reinstall OEM seat bolts and tighten to OEM spec.



## Step 3

After Universal Base is installed, adjust front support foot as needed

