



2025+ AND 2020-2024 FORD POLICE INTERCEPTOR UTILITY MESH WINDOW GUARDS INSTALLATION GUIDE

Description	Part Number
2025+ AND 2020-2024 FORD POLICE INTERCEPTOR UTILITY MESH WINDOW GUARDS	AS5.T500.014

Product Mounting Disclaimer


Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.



PARTS & HARDWARE DESCRIPTION

AS5.T500.014

ITEM NO.	DESCRIPTION	QUANTITY
1	2020+ FORD PIU MESH WINDOW GUARD	2
2	10-16X3/4 SELF TAPPING SCREW	24

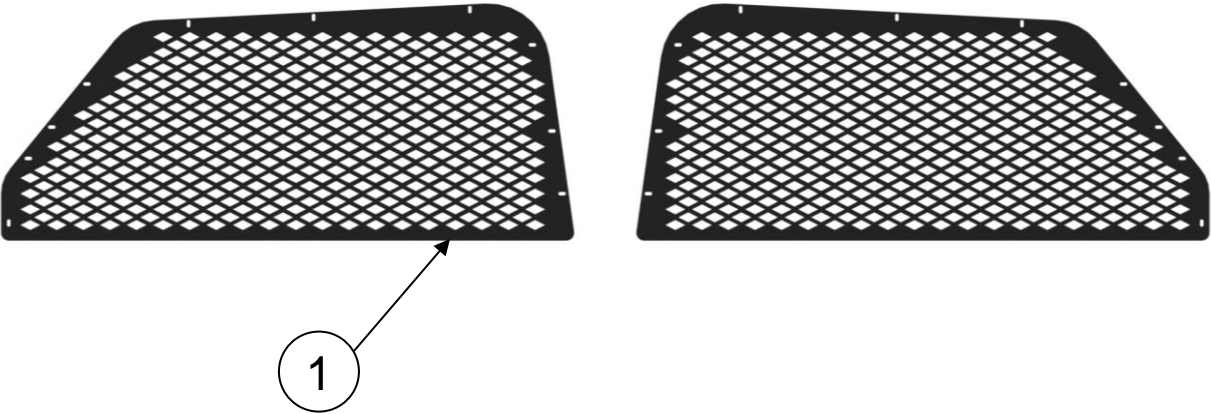

INSTALLATION INSTRUCTIONS

Tools and hardware required:

- Imperial socket sets and ratchet
- Impact drill
- Imperial allen keys
- Philips head screwdriver

Step 1

Place the mesh window guards on the interior side of the rear windows.

Step 2

Screw the mesh window guards in place by using the provided self tapping screws.

Make sure the screws securely attach the window guards to the metal door frame.

Use the highlighted areas below to secure the mesh window guards to the door frame.

