



FLANGED BASE PLATE INSTALLATION GUIDE

Description	Part Number
23" FLANGED BASE PLATE	90.C202.008
29" FLANGED BASE PLATE	90.C202.007

Product Mounting Disclaimer


Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.



PARTS & HARDWARE DESCRIPTION

AS4.C500.01


ITEM NO.	DESCRIPTION	QUANTITY
1	Universal console bracket	4
2	3/8-16X1 hex head screw	4
3	3/8 Steel washer	4

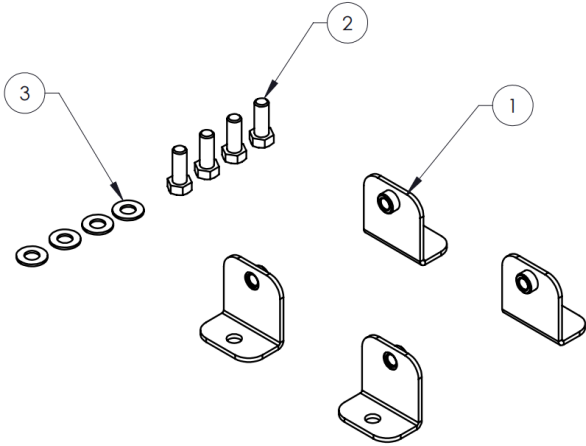

The universal console bracket kit can be used with either the 29" or 23" flanged base plate.


29" Flanged Base Plate

Part Number 90.C202.007

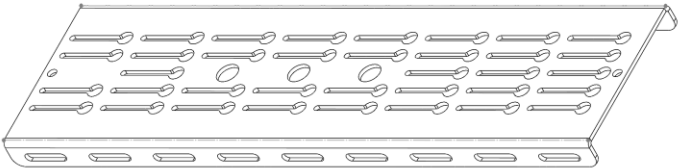

23" Flanged Base Plate

Part Number 90.C202.008

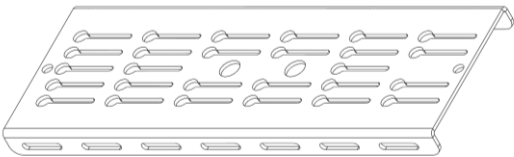

INSTALLATION INSTRUCTIONS

Step 1

Place the base plate in the desired position on the floor of the vehicle. It may be necessary to temporarily mount the console box, pole, or other options to determine the best location for the base plate.

Step 2

Install the leg kit to any of the mounting holes on the vertical flanges of the base plate using hardware provided. (Note: wide spacing of legs provides greater stability.) Adjust location of legs to suit equipment mounted below the vehicle floor. Mark the mounting hole location, and note whether it will be necessary to shim any leg with washers to compensate for floor irregularities.

Step 3

Drill 17/32" (.53") holes in the floor at each mounting location, using care not to damage any equipment that may be under the floor.

Step 4

Place the bolts in holes, and nuts and washers, and tighten, (hardware not provided by PMT). If the floor is less than 1/4" thick, we recommend using fender washers on the bottom side. Do not use lag screws or sheet metal screws as they can pull out of the floor.

