



FORD F-SERIES 3RD BRAKE LIGHT MOUNTING PLATFORM INSTALLATION GUIDE

2015+ F-150
2017+ F-250 TO F-550

Description	Part Number
FORD F-SERIES 3RD BRAKE LIGHT MOUNTING PLATFORM	AS5.T500.013

Product Mounting Disclaimer










Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.




PRODUCT VISUAL



MOUNTING PATTERNS


AMPS	
VESA 75	
VESA 100	
ECCO 11" MINIBAR	
ECCO 15" MINIBAR	
CODE 3 ARCH BEACON	
CODE 3 SB48 BEACON	
ECCO BEACONS	
PANORAMA ANTENNA'S	

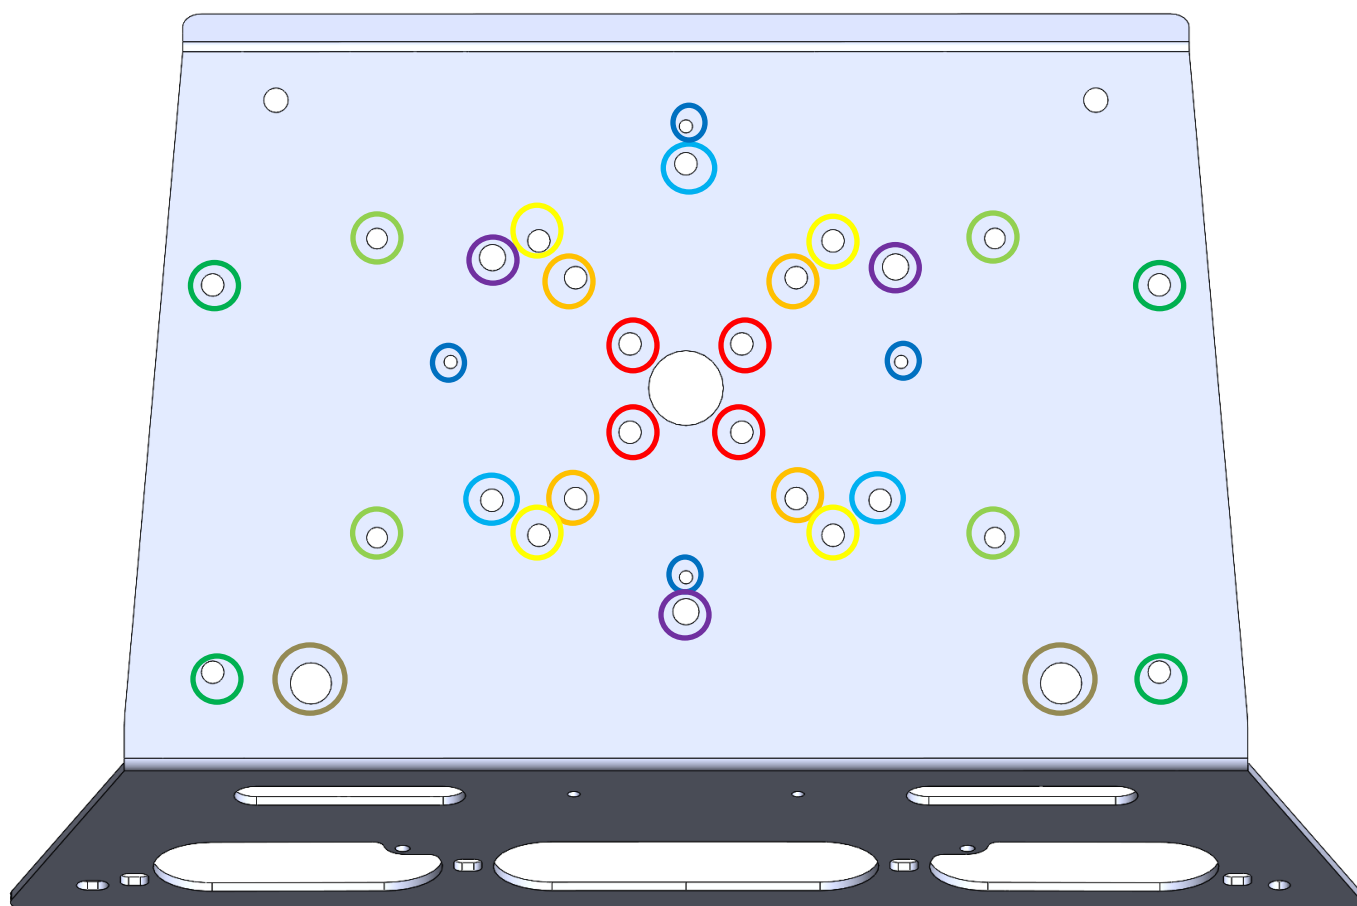

PARTS & HARDWARE DESCRIPTION

AS5.T500.013

ITEM NO.	DESCRIPTION	QUANTITY
1	Mounting platform	1
2	Sandwich plate	1
3	PMT logo plate	1
4	Sealing foam	1
5	Rubber bumper	2
6	6-32 X 3/4 Hex head screw	2
7	6-32 X 3/8 Hex head screw	2
8	1/4 Nylok nut	2
9	6/32 Nylok nut	2

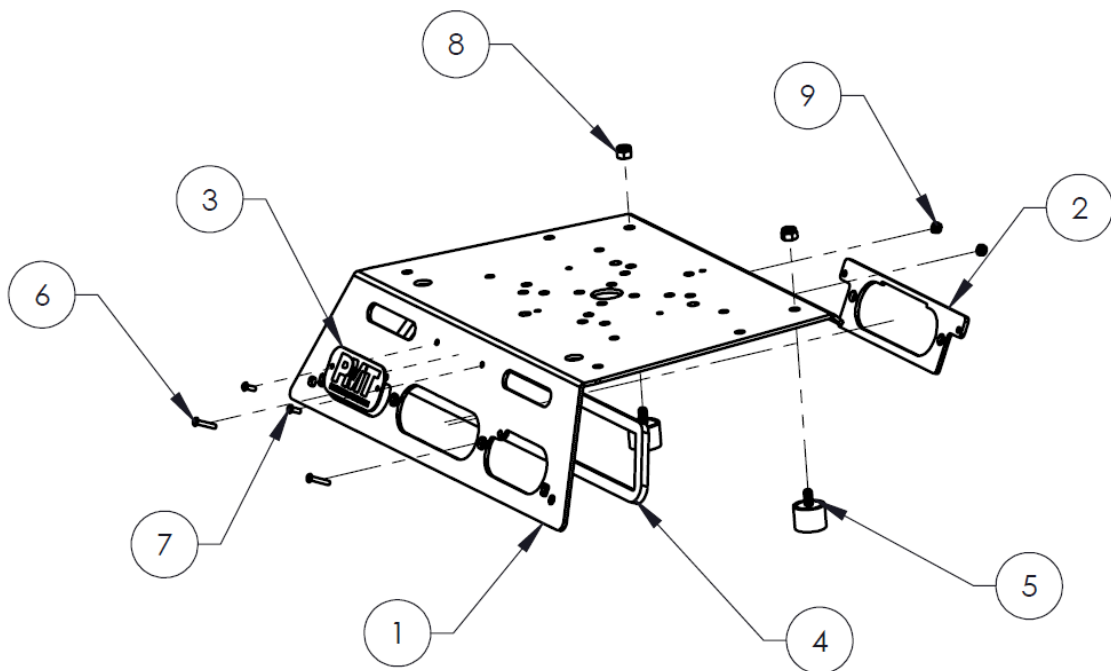

INSTALLATION INSTRUCTIONS

Tools and hardware required:

- Imperial socket sets and ratchet
- Imperial allen keys

Step 1

Remove the OEM 3rd brake light by removing the 4 screws, highlighted in blue below.



Step 2

Remove the wiring harness from the 3rd brake light



Step 3

Insert the sandwich plate by rotating and sliding the plate into the center cutout.



INSTALLATION INSTRUCTIONS

Step 4

Attach any accessories to the mounting platform.

Step 5

Place the mounting platform on the roof and secure the sandwich plate to the platform with the supplied 6-32 x 3/4 screws.



Step 6

Reattach the brake light harness to the OEM 3rd brake light. Make sure the electrical connection is secure and the wiring harness gromet is pushed back into the original hole.



Step 7

Reattach the 4 screws removed in step 1.