



## 2021+ FORD F-150 & 2015-2020 FORD F-150 HEADLINER MOUNT FOR FEDERAL SIGNAL USER GUIDE


Description	Part Number
2021+ FORD F-150 & 2015-2020 FORD F-150 HEADLINER MOUNT FOR FEDERAL SIGNAL	AS4.C244.011

### Product Mounting Disclaimer

Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.



# DESCRIPTION OF PARTS

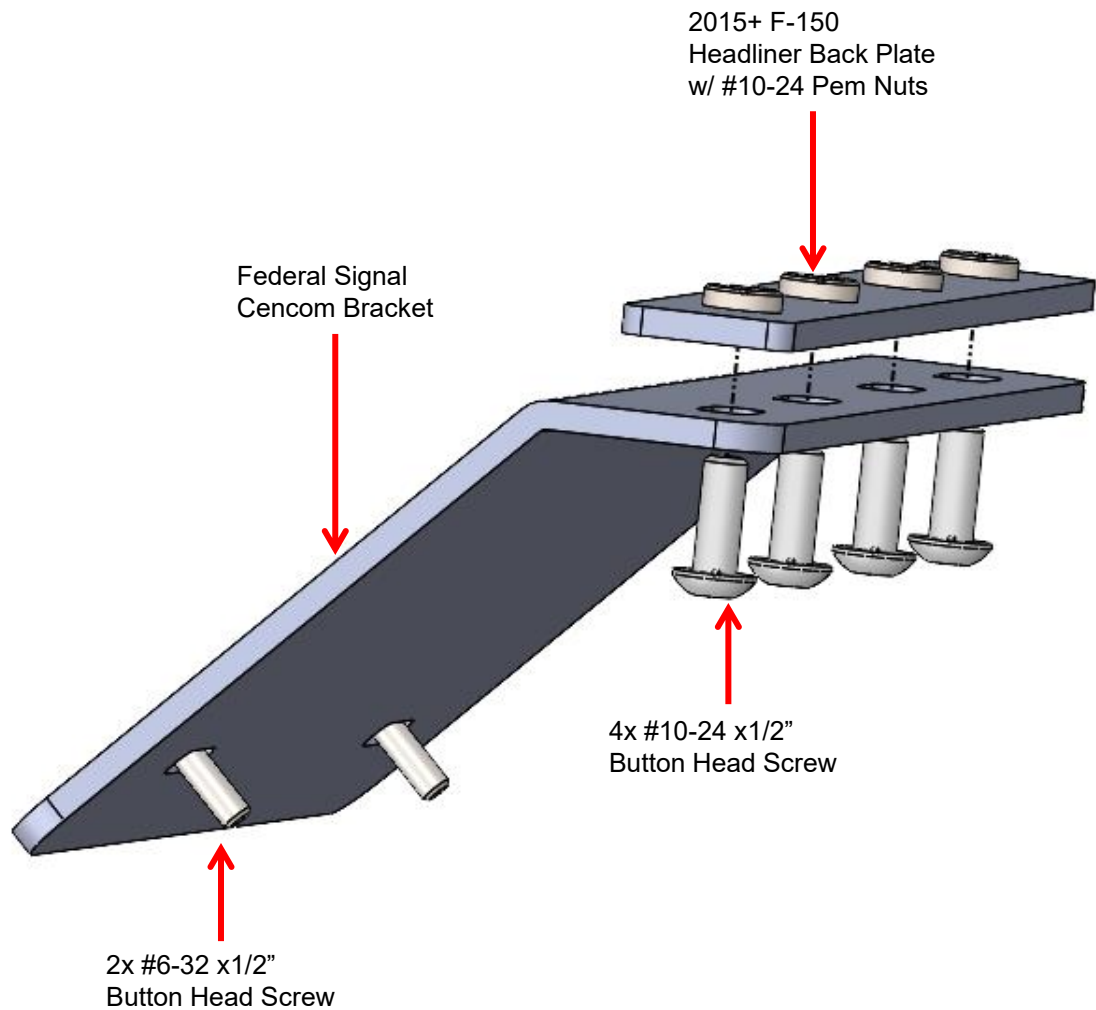


# INSTALLATION INSTRUCTIONS

## Tools and hardware required:

- Socket set suitable for #10-24 Hex Allen wrench
- Socket set suitable for #6-32 Hex Allen wrench
- $\Phi 3/16$ " drill

## Step 1

Place the cencom unit on top of the bracket and using the supplied 2x #6-32 button head screws tighten it.

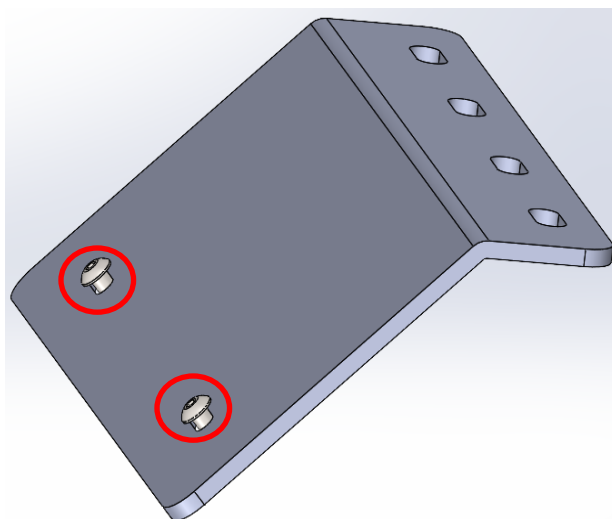

# INSTALLATION INSTRUCTIONS

## Step 2

**Option A:** Gently pry and take off the roof partly, place the headliner back plate in the desirable place.



**Option B:** Gently pry and take off the OEM headliner and place the headliner back plate in the desirable place.



# INSTALLATION INSTRUCTIONS


## Step 3

Use the  $\Phi 3/16$ " drill and drill four holes based on the bracket's location



## Step 4

Attach the cencom and bracket assembly by using the supplied 4x #10-24 x1/2" button head screws.

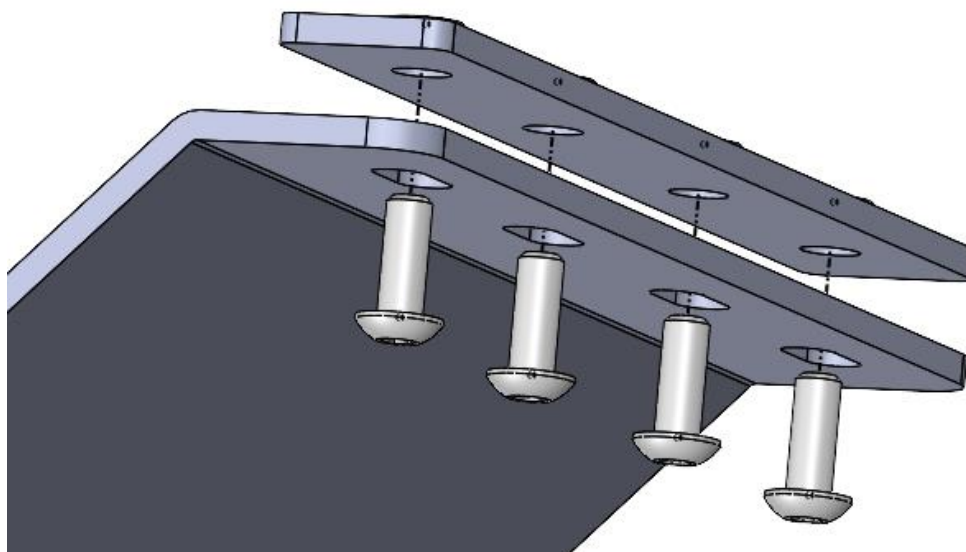

# INSTALLATION INSTRUCTIONS

## Step 5

Put the roof or the OEM headliner back. Make sure everything is tight and secure.

