




2020+ SILVERADO HEADLINER MOUNT

USER GUIDE

Description	Part Number
2020+ SILVERADO HEADLINER MOUNT FOR D&R PURSUIT AND FED SIGNAL PATHFINDER (17 BUTTONS)	AS4.C244.013



PARTS & HARDWARE DESCRIPTION (AS4.C244.013)

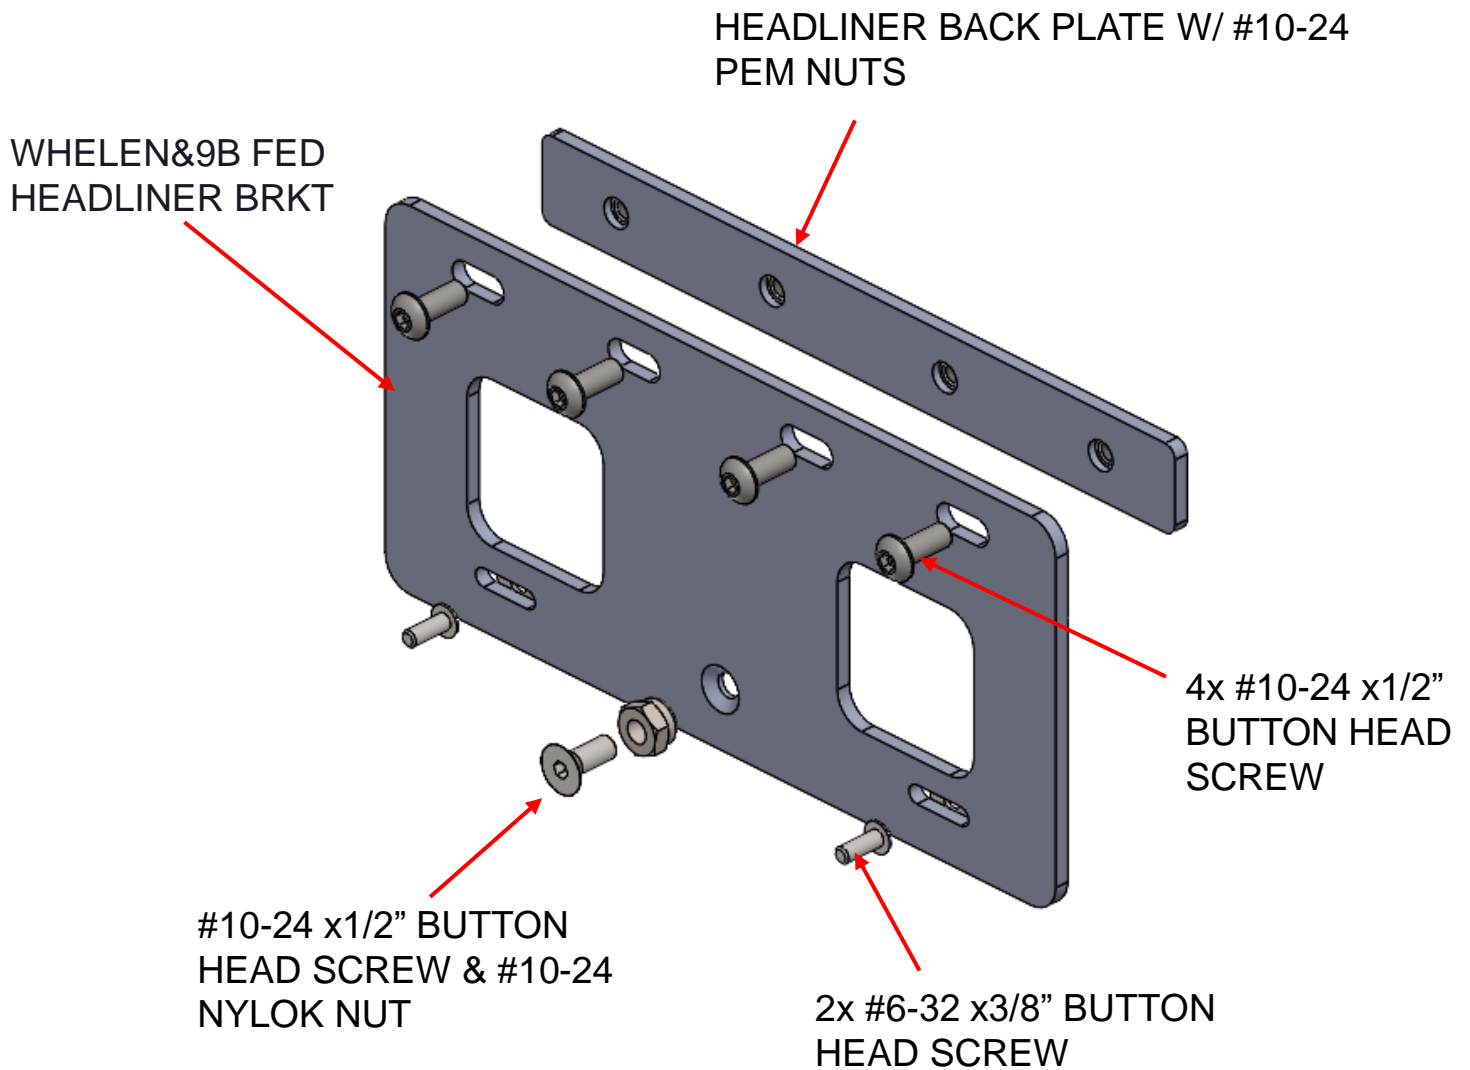

INSTALLATION INSTRUCTIONS

AS4.C244.013

2020+ SILVERADO HEADLINER MOUNT FOR WHELEN CENCOM AND FED SIGNAL PATHFINDER (17 BUTTONS)

Tools and hardware required:

- Socket set suitable for #10-24 Hex Allen wrench
- Socket set suitable for #6-32 Hex Allen wrench
- $\Phi 3/16$ " drill

Step 1 (FOR D&R PURSUIT): Place the device unit on top of the bracket and using the supplied 2x #6-32 button head screws tighten it from the back.




Step 1 (FOR FED SIGNAL PATHFINDER- 9 BUTTONS):

Place the cencom unit on top of the bracket and using the supplied 2x #6-32 button head screws to tighten it from the back.



Step 2:

a): Remove the OEM headliner temporarily

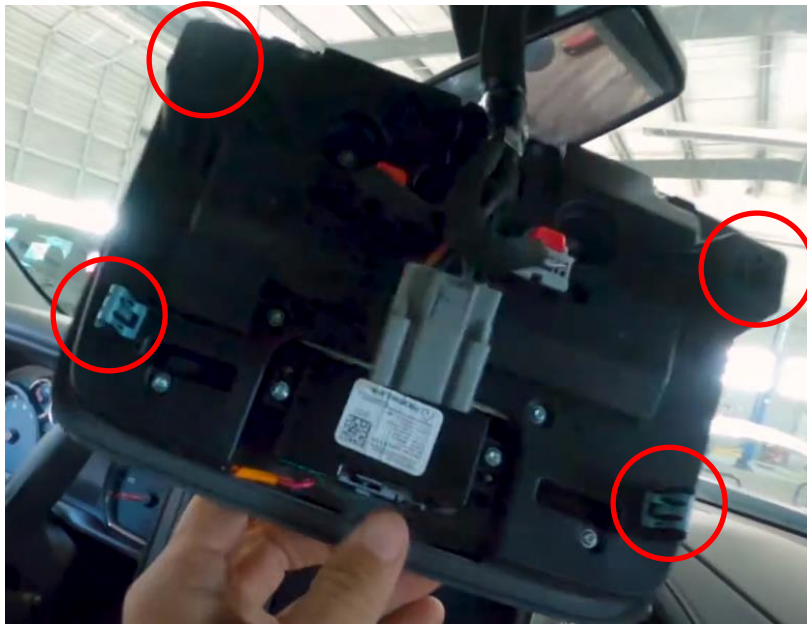


b): Gently pry and take off the OEM headliner and place the headliner back plate in the desirable place.



Step 3: Use the $\Phi 3/16$ " drill and drill four holes based on the bracket's location



Step 4: Attach the cencom and bracket assembly by using the supplied 4x #10-24 x1/2" button head screws.

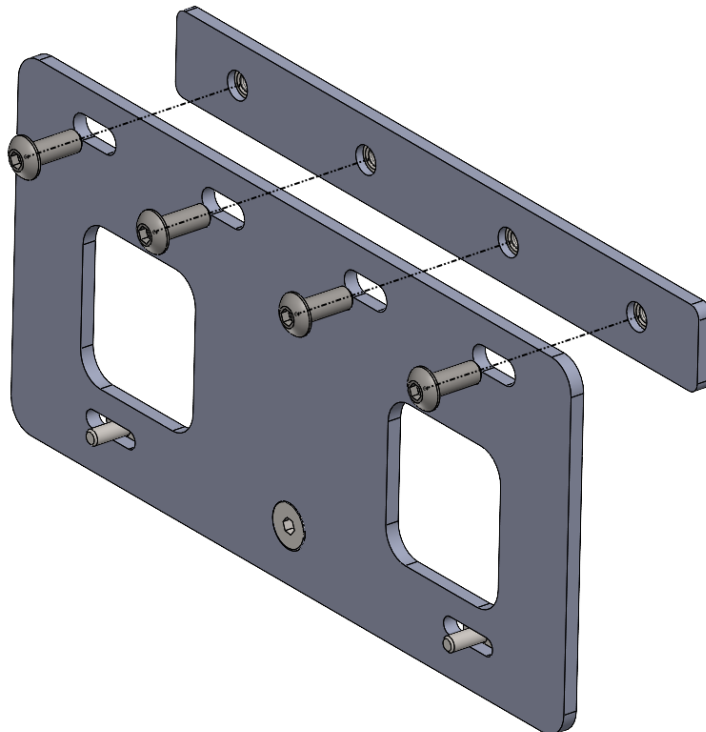

Step 5: Put the roof and the OEM headliner back. Make sure everything is tight and secure.



D&R Pursuit option



Fed Signal Pathfinder(17 buttons) option

NOTE: This assembly has been tested on the 2020+ Silverado vehicle, but it could potentially fit on the other vehicles as well.

Please ensure to have minimum 7"x4.5" blank space and the installer can remove the OEM headliner safely to access the backside of the roof. After installation, ensure the device will not block the rear-view mirror.

