



DELL LAPTOP RETROFIT FRONT POCKET KIT FROM PMT

USER GUIDE

Description	Part Number
Dell Laptop Retrofit Front Pocket Kit From PMT	AS7.D900.006



INTRODUCTION

This instruction sheet is for attaching the PMT retrofit pockets onto the Dell Latitude 5430 Rugged and Dell Latitude 7330 Rugged Extreme laptops. The retrofit pocket kit will allow both Dell Latitude computers to fit in all PMT laptop docks when clamps are configured in the position for Dell laptop models: 5404/5414/5420/5424/7204.




DELL RETROFIT POCKET INSTRUCTION SHEET

Required Equipment:

- Dell Retrofit Pocket Kit (AS7.D900.006)
- Dell Latitude 5430 or 7330 Laptop
- Cross-head screwdriver

The Kit Includes:


- Right Pocket Extender
- Left Pocket Extender
- M3.5 X 12mm Screws

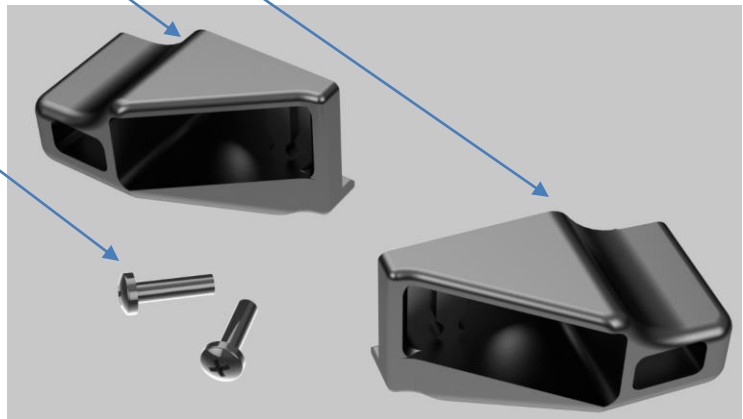

INSTALLATION PROCEDURE

Step 1

Remove both left and right front handle screw.

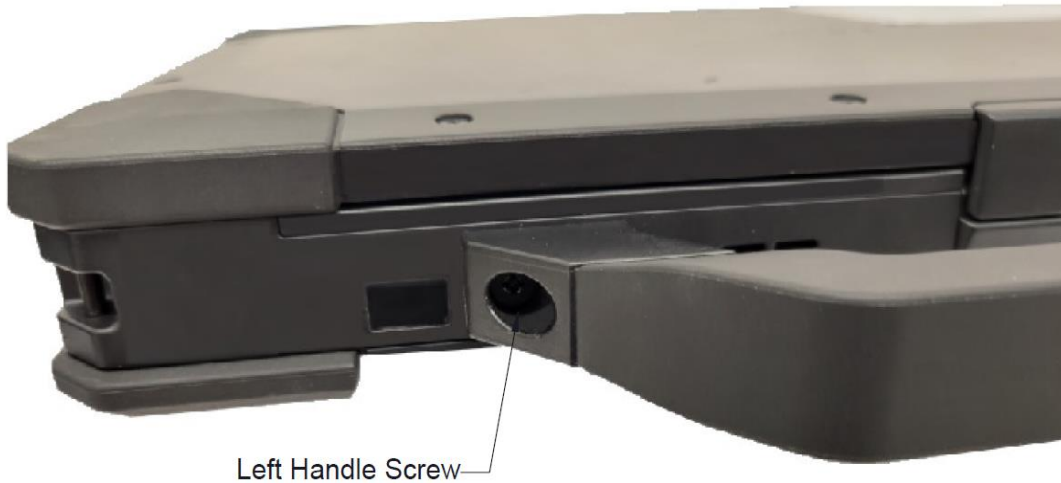

Step 2

Remove handle and place it aside with hardware.

Keep the original handle screws if pocket extenders will be removed in the future.



INSTALLATION PROCEDURE (CONTINUED)

Step 3

Place both left and right pocket extender onto the front of the laptop.

- Pocket extenders are labeled R & L.



Align rear tab on pocket extenders with front pockets on the laptop.



INSTALLATION PROCEDURE (CONTINUED)

Step 4

Re-attach front handle using supplied screws, sandwiching the pocket extenders between the handle and front of the laptop.

- Don't over-tighten screws; recommended torque = 8 lbf.in / 0.9 Nm



Step 5

Perform a fit-check to ensure the laptop docks in and releases properly.



[END]