



TrimLine Vehicle Dock with Flex Lock For Panasonic FZ-G1 Toughpad Tablet Computers

User Guide


Description	Part Number
PMT Standard G1 Vehicle Dock with Flex Lock	AS7.P001.101
PMT Standard G1 DPT Vehicle Dock with Flex Lock	AS7.P001.105
PMT Extended G1 Vehicle Dock with Flex Lock	AS7.P001.201
PMT Extended G1 DPT Vehicle Dock with Flex Lock	AS7.P001.205

Note: Extended docks accommodate extended batteries and hand straps

Description of Parts and Layout

Note: Pictures used are of a standard dual pass thru (DPT) vehicle dock, however processes and info relate to all PMT FZ-G1 vehicle docks


Front View

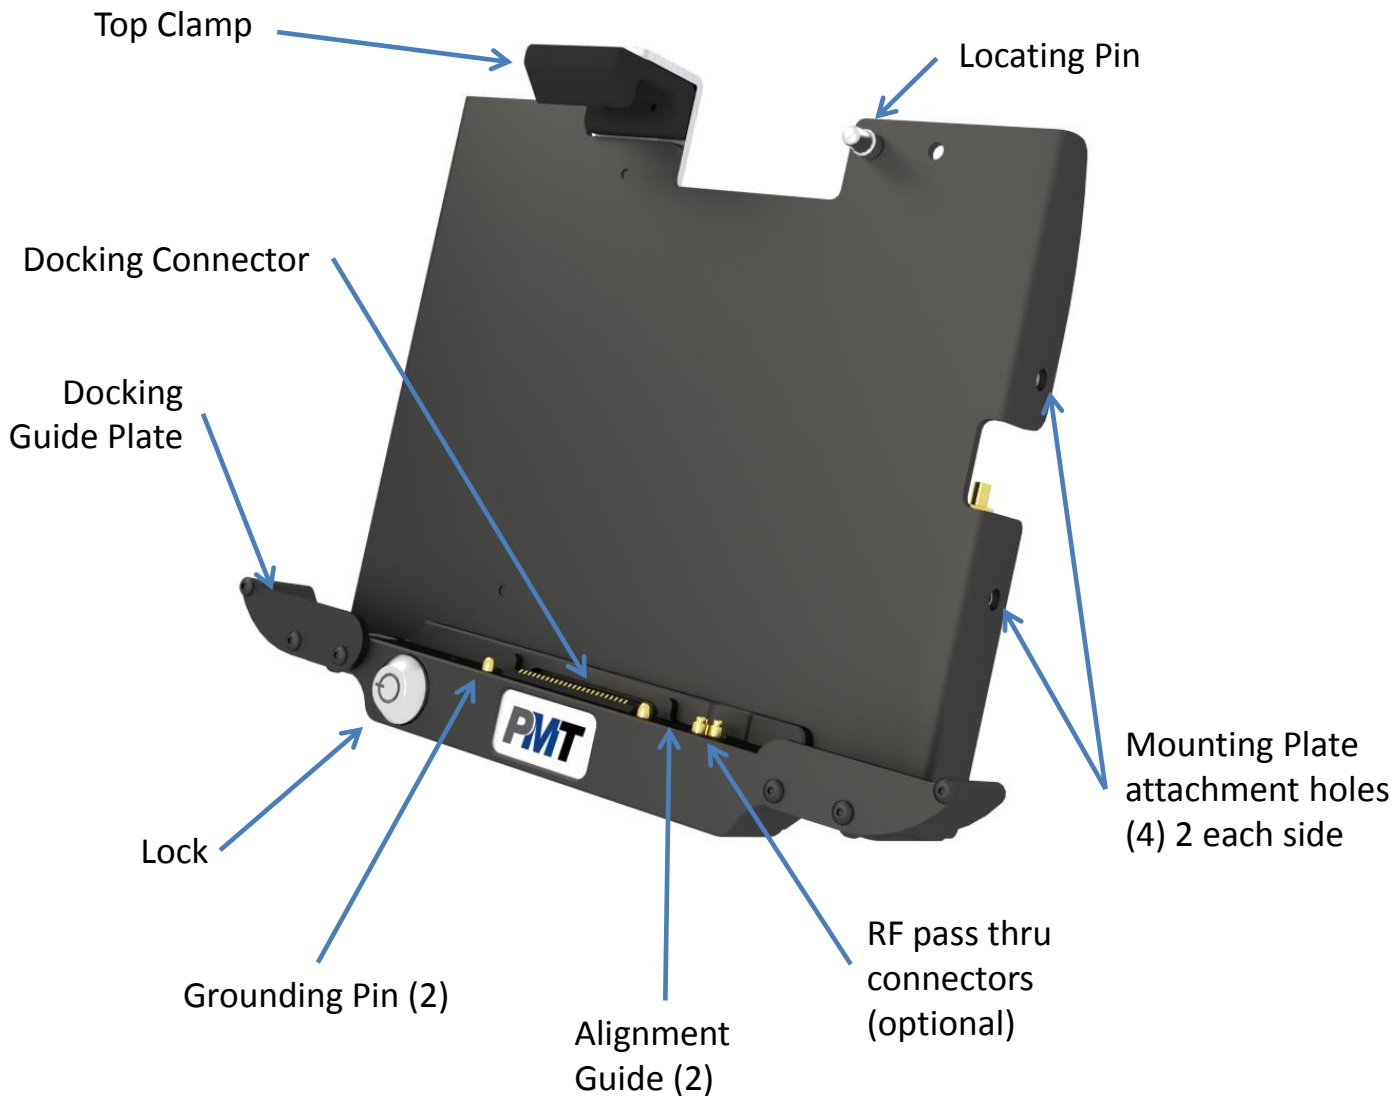

Description of Parts and Layout

Note: Pictures used are of a standard dual pass thru (DPT) vehicle dock, however processes and info relate to all PMT FZ-G1 vehicle docks


Rear View

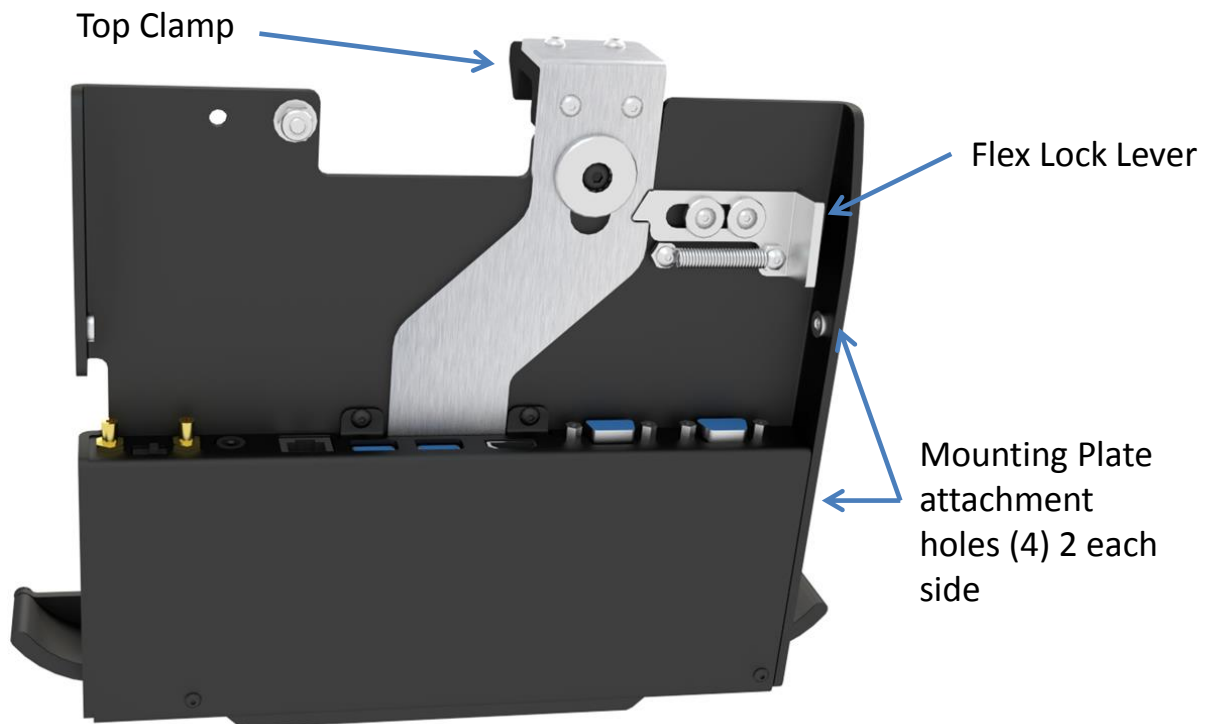

Description of Parts Continued

Rear View

Internal/External Antenna Switch
-Switch should be towards the outboard side of the dock when using external (RF pass-through) antennas

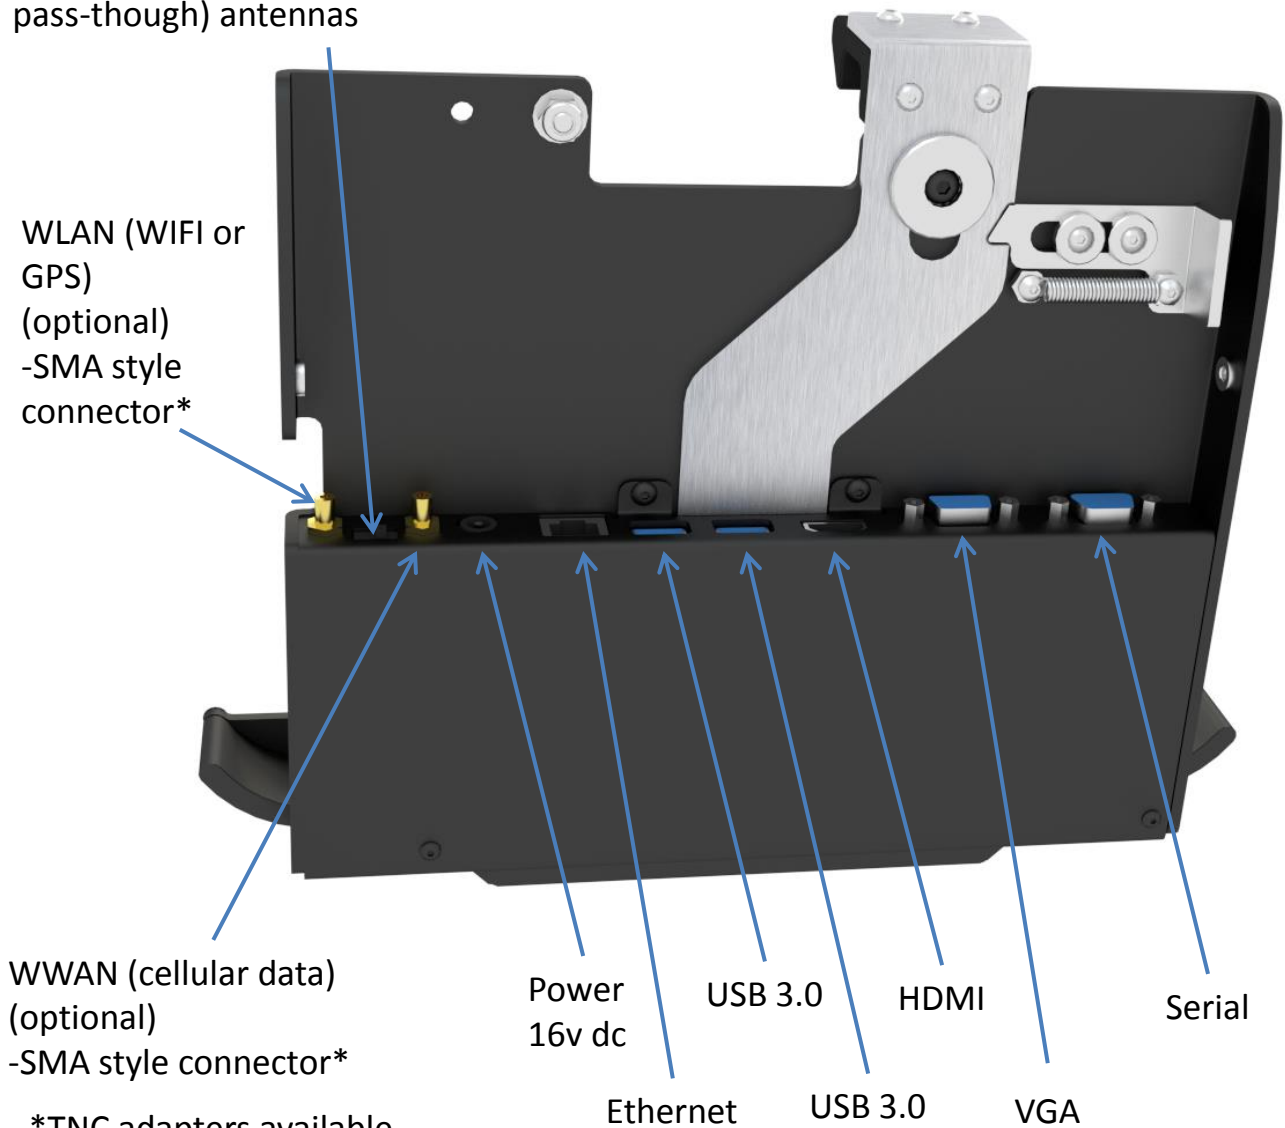


Inserting the Tablet



Step 1:

Ensure the dock is unlocked

To unlock insert key and rotate to the horizontal (unlocked) position and remove the key

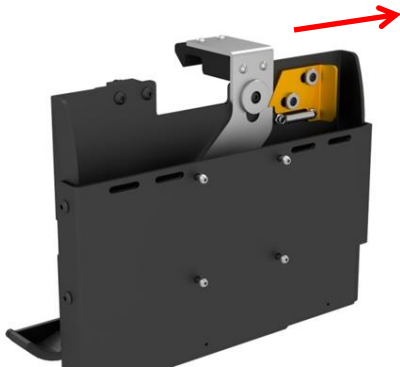

Step 2:

Pull the Flex Lock Lever towards the outside of the dock

The Top Clamp will spring up to the open position to allow easy tablet docking



Step 3:

Insert the tablet bottom edge first ensuring proper alignment with connector and alignment pins, then push top of tablet back into the dock

Inserting the Tablet



Step 4:

Push the Top Clamp down until it clicks. The Flex Lock lever will auto-engage and the tablet is now secure in the dock and ready for use



Step 5:

For added theft deterrence you may now insert the key and rotate to vertical (locked) position, then remove the key

Removing the Tablet from Docking Station



Step 1:

Ensure the dock is unlocked

To unlock insert key and to the horizontal (unlocked) position and remove the key



Step 2:

Pull the Flex Lock Lever towards the outside of the dock

The Top Clamp will spring up to the open position to allow easy tablet removal



Step 3:

Tilt the top of the computer out and past the Top Clamp, then remove from the dock.

The dock can now be left as is making re-docking of the tablet even easier

Wiring/Cable Management




Connect all cables securely to dock connections, and use tie straps to secure cables to the built-in slots on the mounting/interface plate.

Wiring Tip:


PMT does not recommend relying on a cigarette socket adaptor for powering vehicle docks. We recommend hard wiring using a good clean ground direct from the vehicle battery (-) post, and (+) supply from a fused 12v location also directly from the vehicle battery. All Peripherals connecting to the docking station should get power and ground from the same location as the dock.

Visit www.precisionmounts.com/installation-instructions.html for a copy of our general wiring and troubleshooting guide

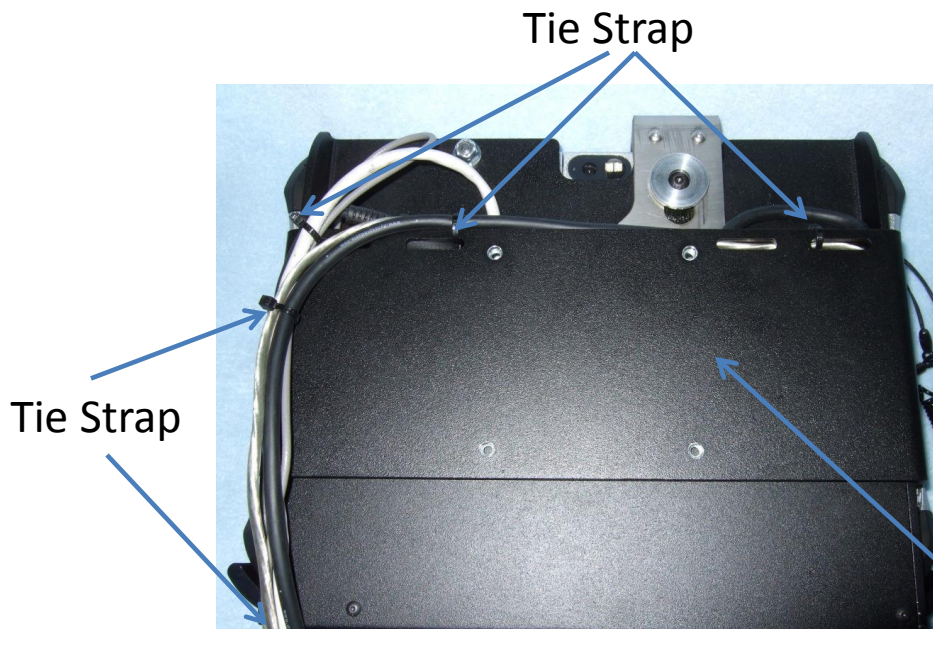

PMT VESA 75mm x 75mm
mounting/interface plate

Mounting

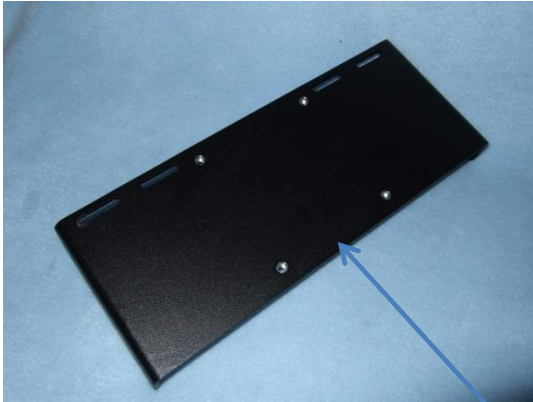

Once you have attached all cables needed to the vehicle dock, attach the mounting/interface plate to the dock using the 4 supplied 10-24 UNC screws as shown



Description	Part Number
PMT VESA 75mm x 75mm mounting/interface plate	AS7.P001.001



The standard mounting/interface plate that comes with the PMT G1 TrimLine vehicle dock features an industry standard VESA 75mm x 75mm bolt pattern. This allows easy mounting to many pre-existing mounts as well as dedicated mounts from PMT. The screws needed for this are M4 x 12mm.