



INSTALLATION INSTRUCTIONS

Product

7160-1541

BASE - CHEVROLET BOLT 2017+


Revision

Rev A

Form

INST-1048

Printing Spec: PS-001

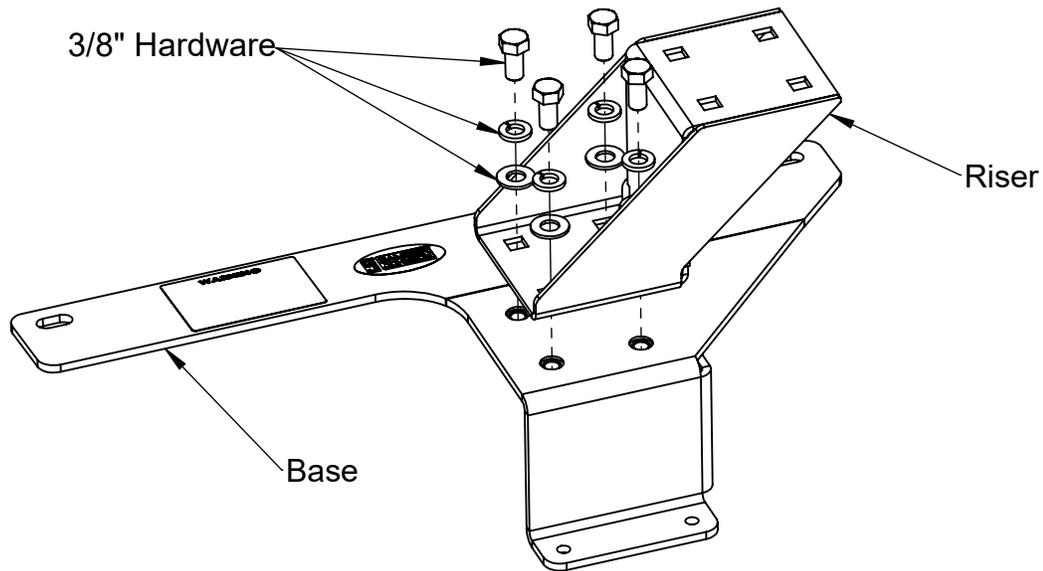

These instructions cover the installation of Gamber-Johnson vehicle base for 2017+ Chevrolet Bolt .

Install Vehicle Base:

1. Remove the two OEM front passenger seat bolts with T50 star point socket.
2. Slide the base between the seat pedestal and seat base.
3. Re-insert and tighten the OEM passenger seat bolts to manual specified torque.
4. Install the riser to the base at desired location and orientation using the #3/8 hardware provided.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2021 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868