



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product

7160-0260 Vehicle Base

FORD FUSION 2013+

Revision


Rev.C

Form

INST-487

Printing Spec: PS-001

The purpose of this instruction sheet is to illustrate the manufacturer's recommended method of installing the Ford Fusion 2013+ vehicle base. The base requires no drilling.

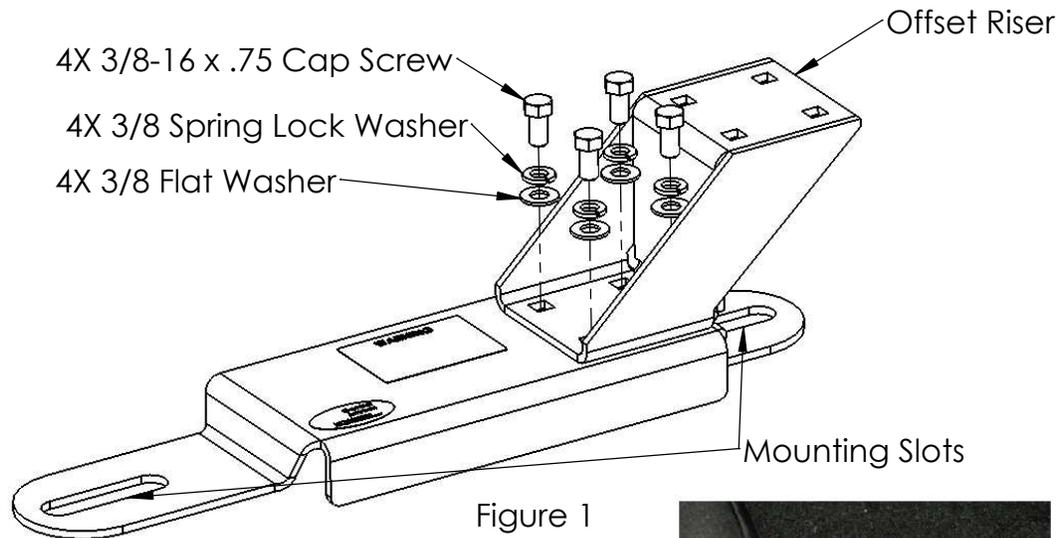

Installation

1. Remove the seat bolts located at the front of the passenger seat.
2. Loosen but do not remove the seat bolts at the back of the passenger seat.
3. Orient the base with the bent flange towards the front of the vehicle.
4. Slide the base between the seat legs and the vehicle floor pan (see Figure 2).
5. Align the slots of the base with the mounting holes on the seat and vehicle floor.
6. Re-insert the bolts that were removed in STEP 1.
7. Tighten all four (4) seat bolts securing the passenger seat.
8. Secure the Offset Riser to the base.



Figure 2

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2013 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868