




INSTALLATION INSTRUCTIONS

<u>Product</u>	<u>Revision</u>	<u>Form</u>
7160-0532;7160-0556 Base, Chevy Caprice 2014+-No Drill Base, Chevy Colorado/ GMC Canyon 2015+	Rev B	INST-623
Printing Spec: PS-001		

- You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death
- DO NOT install or use this assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of this assembly are responsible for installing and using this assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instruction can be obtained from Gamber-Johnson. If you need assistance or have any questions, go to www.gamberjohnson.com or call Gamber-Johnson at 1-800-456-6868.
- DO NOT remove the warning label from product under any circumstances.

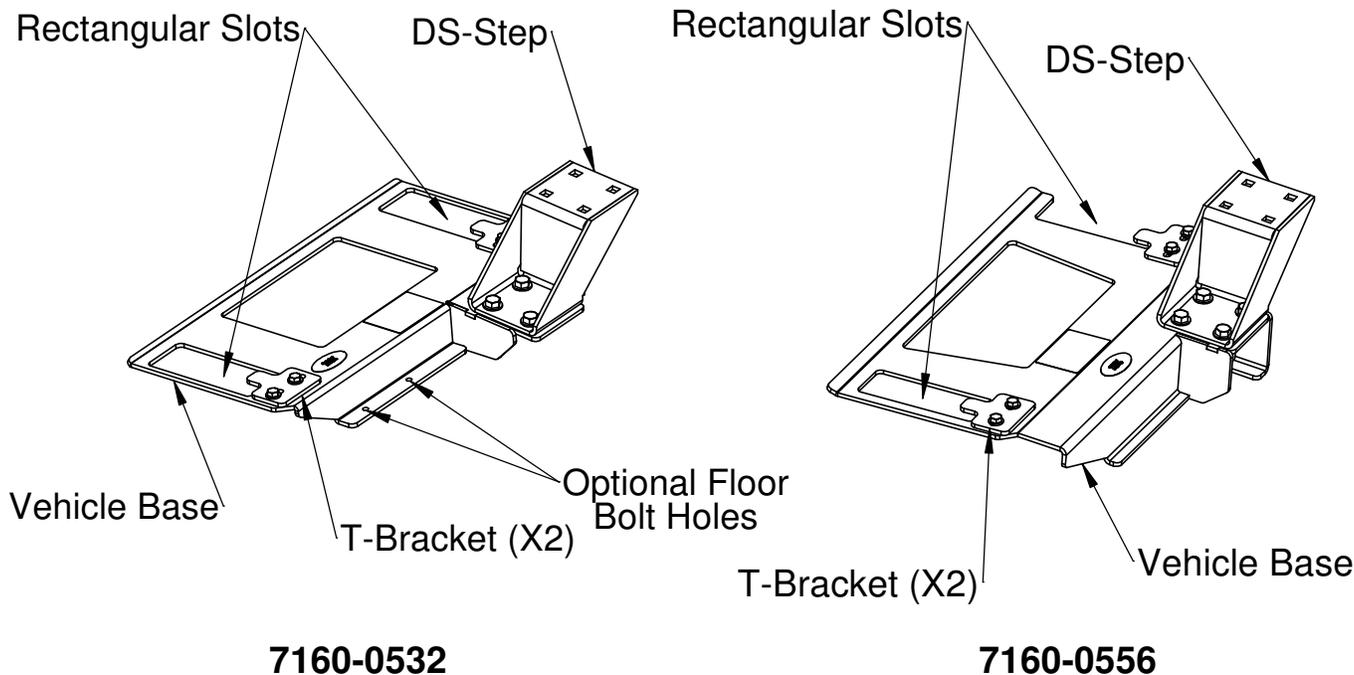

Product Mounting Disclaimer
 Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufacturers specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2013 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Remove Front Passenger Seat:

1. Slide the seat forward and remove the rear seat bolts with a T50/T45 bit. See Figure 1.
2. Slide seat backward, now lean seat forward and slide out of the front hook slots, and set seat out of the way.



Figure 1.



Figure 2.

Install Vehicle Base:

1. Set vehicle base in place to allow seat hooks to slide through the rectangular slots in the base. See Figure 2.
2. Put the seat back into its place by hooking the front hooks through the vehicle base slots and pull the base all the way forward.
3. Install T-Brackets using provided hardware. The tab of the bracket will be between the vehicle base and the seat rail. See Figure 3.
4. Slide seat forward and replace rear seat bolts.
5. Attach the DS-Step with the hardware provided. See Figure 4.



Figure 3.



Figure 4.

NOTES:

1. If additional stability is required, use the optional floor bolt holes. Before drilling the holes ensure the area underneath the floor is clear.
2. Vehicle with power seats: rise the seat above for maximum seat travel.

WARNING

- This assembly should not be positioned in the area where the airbag may be deployed.
- DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag may cause serious injury or death if an airbag is activated.
- If installation of the equipment requires that the equipment be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at 1-800-456-6868.
- High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.