




INSTALLATION INSTRUCTIONS

<u>Product</u> 7160-1328 FORD PI UTILITY, 2011-2019, REAR CARGO PARTITION	<u>Revision</u> Rev A	<u>Form</u> INST-897 Printing Spec: PS-001
--	---------------------------------	---

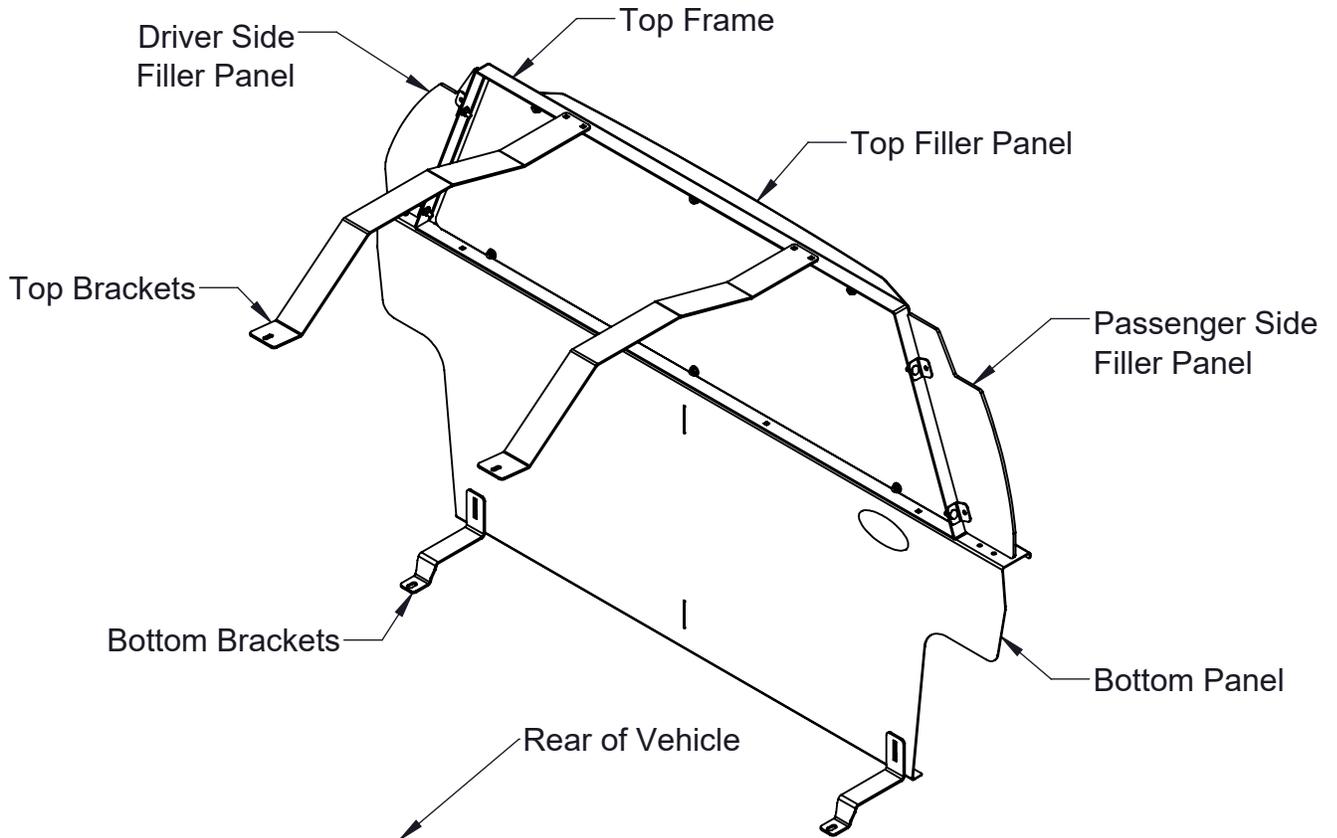

These instructions will cover the installation of the rear cargo partition for 2011 to 2019 Ford Police Interceptor Utilities. The install assumes the vehicle has the OEM rear cargo cover floor and associated hardware. If this equipment is missing or the cargo barrier is being installed in conjunction with a Gamber-Johnson rear gas assist trunk tray (7160-1245) additional hardware will be needed. (2) M8-1.25 x 100mm hex bolts and (2) 2.75" unthreaded spacers (Reference McMaster Carr Part #92825A258) will be needed.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2019 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

To Install:

1. Place the bottom panel of the partition in the vehicle with the flat side facing the rear of the vehicle. Place the top frame in the vehicle with the open side facing the rear of the vehicle as shown above. Attach the top frame to the bottom panel using (4) 1/4-20 x 0.75 carriage bolts, washers and nylok nuts included in the hardware bag.
2. Attach the lower mounting brackets to the bottom panel using (2) 1/4-20 x 0.75 carriage bolts, washer and nylok nuts from the hardware bag. Attach these brackets to the vehicle using the (2) mounting bolts in the front floor cover panel. See Fig. 1 below for their location.
3. Attach the upper mounting brackets to the top frame using (4) 1/4-20 x 0.75 carriage bolts, washers and nylok nuts from the hardware bag. Secure the upper mounting brackets to the vehicle by holding the brackets against the headliner and inserting the 1/4-14 x 1.00 self drilling screws provided into the rear roof channel.
4. Attach the driver and passenger side wings to the L-brackets mounted to the top frame with the 1/4-20 x 0.75 carriage bolts, washers and nylok nuts from the hardware bag.

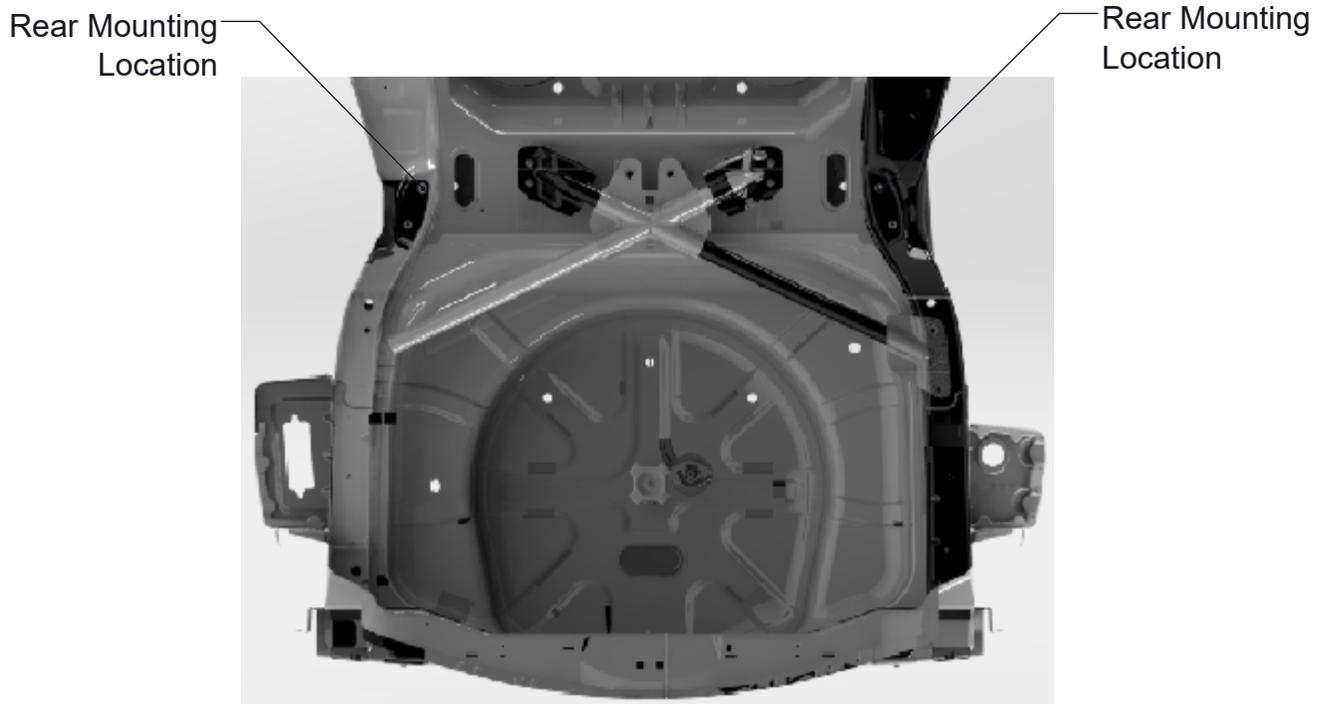


FIG 1 - Rear Mounting Location