



SLIMLINE CRADLES FOR TABLET COMPUTERS USER GUIDE

Description	Part Number
SLIMLINE CRADLE FOR PANASONIC TOUGHBOOK 33 TABLET	AS7.P033.104-1
SLIMLINE CRADLE FOR IPAD 10.9" WITH INFOCASE RUGGED PRO CASE	AS7.I109.104

Note: This product is not designed for in-vehicle use


Product Mounting Disclaimer

Precision Mounting Technologies Ltd (PMT) are not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use PMT products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. PMT specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures' specifications and recommendations, PMT product instruction sheets, or workmanship standards as endorsed through PMT policies and EULA.




DESCRIPTION OF PARTS

Front View

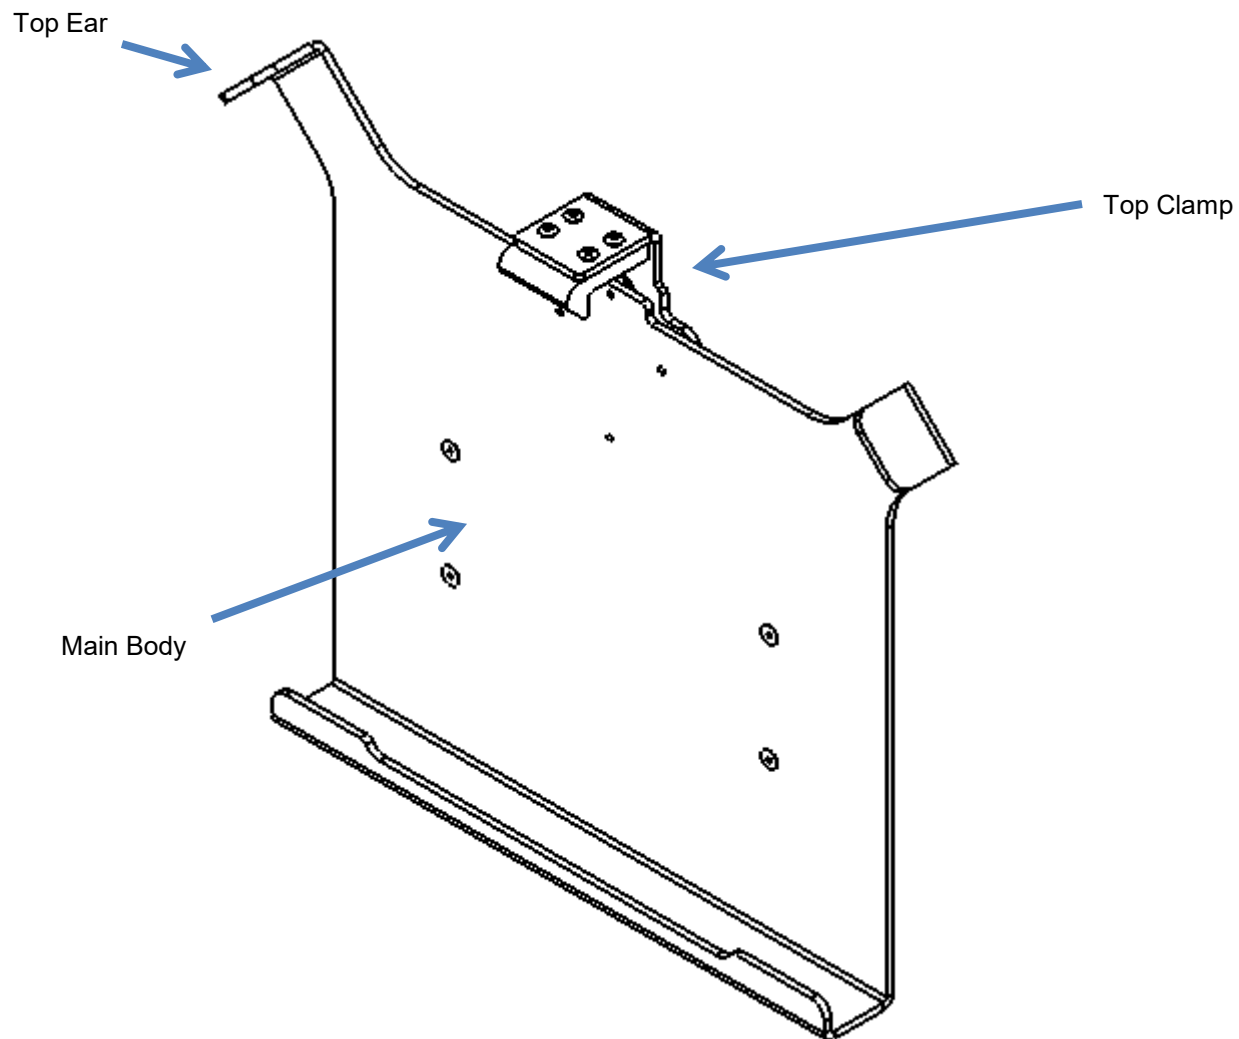

DESCRIPTION OF PARTS

Rear View

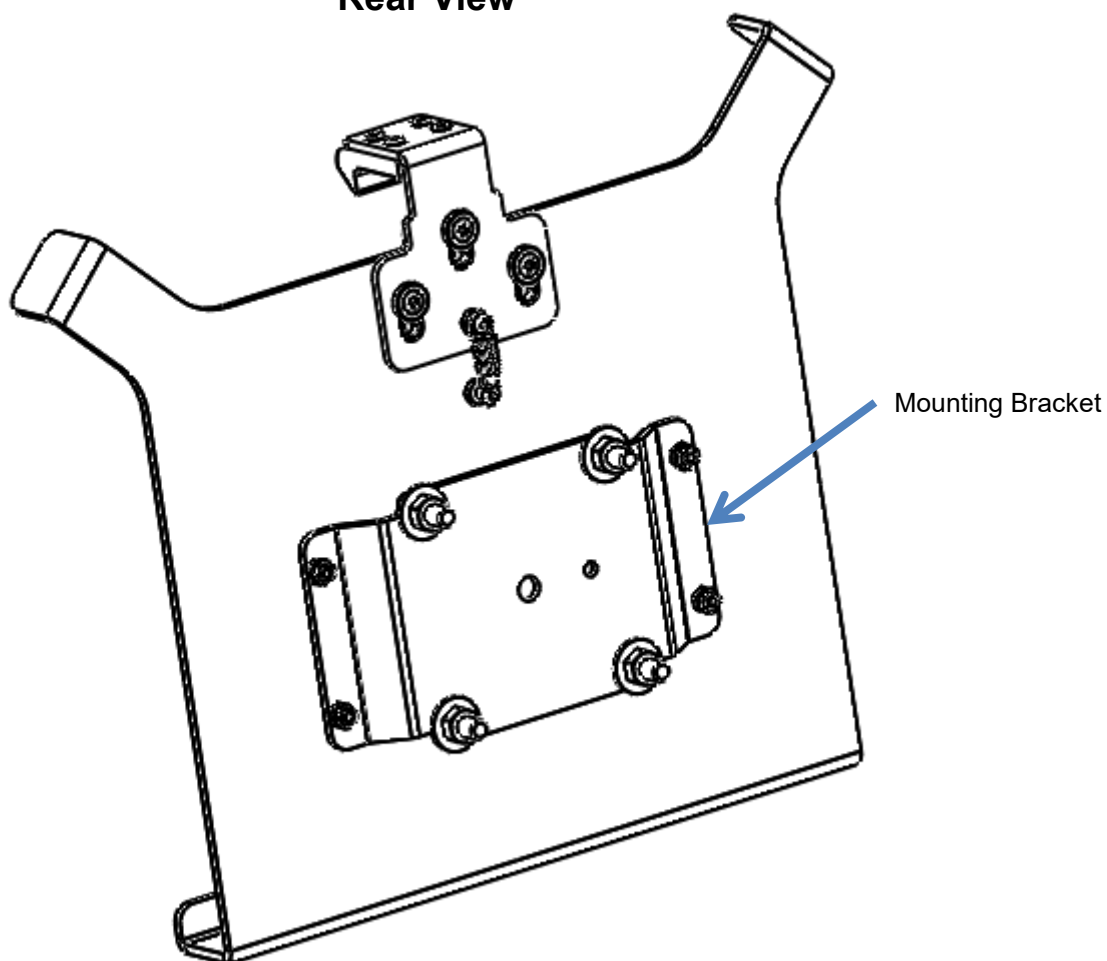

Note: The standard mounting bracket that comes with the PMT Slimline tablet cradle features an industry standard VESA 75mm x 75mm bolt pattern. This allows easy mounting to many pre-existing mounts as well as dedicated mounts from PMT. Use the supplied #1/4-20 hardware for mounting.

INSTALLATION INSTRUCTIONS

Docking the Tablet

Step 1

Lead the bottom of the tablet into the cradle.

Step 2

Push the top of the tablet back into the cradle. This will force the top clamp up and spring into place when tablet is fully seated [see picture].




Undocking the Tablet

Step 1

Use your thumb to move the top clamp up and away from the tablet. The clamp should clear the top of edge of the tablet.

Step 2

Once the top clamp has been lifted, gently pull the tablet out of the cradle.

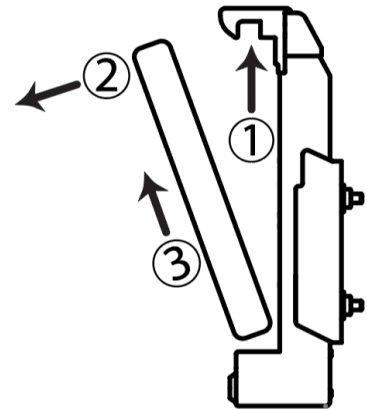

Step 3

Gently lift the tablet out of the docking station. The top clamp will spring closed again. [See picture] Do not pull the tablet all the way out – this could damage the cradle and tablet.

